ADABSTARS

User Manual

The AdabStars Board and app: setup, everyday use for kids and parents, prayer times and the athan, and everything in between.

AdabStars Board · 21.5-inch family wall display

Edition November 2026

Contents

1 **Welcome to AdabStars** 3
- How AdabStars works 3
- About this guide 3

2 **What's in the box** 5
- The Board at a glance 6

3 **Safety, placement and mounting** 7
- Important safety instructions 7
- Choosing a spot 8
- Mounting on the wall 8
- Cleaning and care 9

4 **Using the tabletop stand** 10
- Wall or stand? 10
- Setting up the stand 10
- Moving between the stand and the wall 12

5 **First-time setup** 13
- 5.1 Power on and Android's first-time screens 13
- 5.2 Connect to Wi-Fi (or change networks later) 14
- 5.3 Create your family account 14
- 5.4 Name your family and pick your board address 14
- 5.5 The welcome steps 15
- 5.6 Sign in on the Board 15
- 5.7 Make the Board kid-proof 15
- 5.8 Finish setting up 16

6 **The Board at a glance** 17
- The header 17
- The icons at the top right 18
- The filter bar 18
- Each child's card 18
- The side panels 19
- Game Night 19
- Day and night 20

7 **Everyday use for kids** 21
- Checking off a task 21
- My Stars 22
- The Rewards Shop 22
- Wishlist 23
- Bank (Family plan) 23
- Sadaqah 23
- Cash Out 23
- Duas & Learning 24
- Salah tracker 25
- Leagues (Family plan) 25

8 **For parents: the Parent Console** 26
- 8.1 Finding your way 26
- 8.2 Approvals 27
- 8.3 Check Off 28
- 8.4 Tasks 28
- 8.5 Rewards 29
- 8.6 Wish List 29
- 8.7 Points history and undo 29
- 8.8 Kids 30
- 8.9 Kids' Bank (Family plan) 30
- 8.10 Calendar 30
- 8.11 Leagues (Family plan) 31
- 8.12 Hifdh 31
- 8.13 Settings 31
- 8.14 Parent PIN 32
- 8.15 What's new 32

9 **Prayer times and the athan** 33
- 9.1 Getting prayer times right 33
- 9.2 Athan settings 34
- 9.3 When a prayer arrives 35
- 9.4 Athan history 35
- 9.5 Athan on your speakers (Family plan) 35
- 9.6 When the internet is down 36
- 9.7 Fridays: Jumu'ah and Surah Al-Kahf 37
- 9.8 Islamic announcements 38

10 **The screensaver and display** 39
- 10.1 The prayer screensaver 39
- 10.2 Board theme 40
- 10.3 This Board 40
- 10.4 Board Light 41

11 **Using AdabStars on your phone** 42
- 11.1 Get the AdabStars iPhone app 42
- 11.2 One-tap approvals 42
- 11.3 The athan on phones 43
- 11.4 The board on a phone 43

12 **Keeping the Board up to date** 44
- 12.1 Installing a Board app update 44

13 **Your plan** 45

14 Privacy and your family's data 46
14.1 Encryption 46
14.2 Photos and leagues 46
14.3 Usage data 46
14.4 Microphones and camera 46
14.5 Privacy policy 46
15 Troubleshooting and questions 47
The athan didn't play 47
Prayer times look wrong 47
The Board says "You're offline" 47
Everything looks too big or too small 47
My child's stars didn't arrive 47
Sign-in, password and PIN 48
An update won't install 48
The kids keep opening settings 48
Can I use the Board as a normal Android tablet? 48
Still stuck? 48
16 Specifications 49
17 Safety and regulatory information 50
FCC compliance information 50
FCC statements 50
Power, mounting and care 51
Trademarks 51
18 Warranty and support 52
Limited warranty 52
Returns 52
Contact us 52
19 Index of settings 53
A Appendix: more safety notices 56

1 Welcome to AdabStars

Assalamu alaikum, and welcome. AdabStars turns your family's daily routine (chores, salah, Qur'an and kindness) into a joyful game of earning stars. You set things up as a parent; your children see a friendly board and earn stars for good *adab*.

Your **AdabStars Board** is a 21.5-inch touch screen made to live on a wall at home. It comes with the AdabStars app already on it and starts straight into your family board. From across the room it shows the time, the day's prayer times and the weather. Up close, each child taps their own tasks, sees their stars grow, and saves up for rewards. When a prayer time arrives, the Board plays the athan.

The same family board also works on your phone, so you can approve tasks, add rewards and change settings from anywhere.

How AdabStars works

1. **You create tasks** for each child: prayers, chores, reading, kindness. Each task is worth a number of stars.
2. **Your child taps the task** on the Board when it's done. It turns amber, which means it is waiting for you.
3. **You approve it** from the Board or your phone. The stars land in your child's balance, with a little star-burst to celebrate.
4. **Stars buy rewards** that you choose and price, from a favorite dinner to a family outing.

Around that simple loop sit the faith features families love most: prayer times and the athan, a salah tracker, Duas & Learning with Qur'an recitation, the 99 Names of Allah, memorization with parent approval, and a special screen every Friday.

About this guide

This guide follows the order you will need it: unboxing, safety and mounting (or the tabletop stand), first-time setup, then a tour of the Board, everyday use for kids, and the Parent Console. Later chapters cover prayer times and the athan, the screensaver, using AdabStars on your phone, updates, plans, privacy and troubleshooting. A settings index at the end tells you where every option lives.

TIP

Words in **bold** are the exact names of buttons and settings as they appear on screen. In the Parent Console you can also tap **Search settings** and type what you are looking for, such as "PIN" or "screensaver".

AdabStars improves often. The app on your Board updates itself, so a few screens may look slightly different from the pictures here. To see what has changed, open the Parent Console menu and tap **What's new**. The latest version of this guide is always online at **adabstars.com/start**; scan the QR code on the back cover.


2 What's in the box

Item	What it's for
AdabStars Board	The 21.5-inch wall display with the AdabStars app preinstalled.
Wall plate	A metal plate that holds the Board flat against the wall. It comes **attached to the back of the Board**, held on by **2 small screws on the Board's side**. Keep those 2 screws: they lock the Board onto the plate again once it is on the wall.
6 screws and 6 plastic drywall anchors	For fixing the wall plate to the wall (chapter 3).
Tabletop stand	Two parts (a base with a ledge and a back support), with 3 small stand screws in the hardware box. Lets the Board sit on a shelf, counter or desk instead of the wall. See chapter 4.
Power adapter and AC cord	External power supply, 12 V ⎓ 4.0 A (48 W), 100 to 240 V input, with a detachable AC cord and US plug.
Registration card (if included)	A one-time registration code (it looks like **ADAB-XXXX-XXXX**) for creating your family account. Keep it until you have signed up.
Welcome sheet	A one-page quick start, with a QR code to **adabstars.com/start** (quick start, wall mounting and this guide).
This guide	The printed manual. The latest version is always online: scan the QR code on the back cover.

KEEP YOUR REGISTRATION CODE SAFE

If your box has a registration card, its code works once. If the Board was a gift, the code works with any email address, so the family who will use the Board should create the account.


The Board at a glance

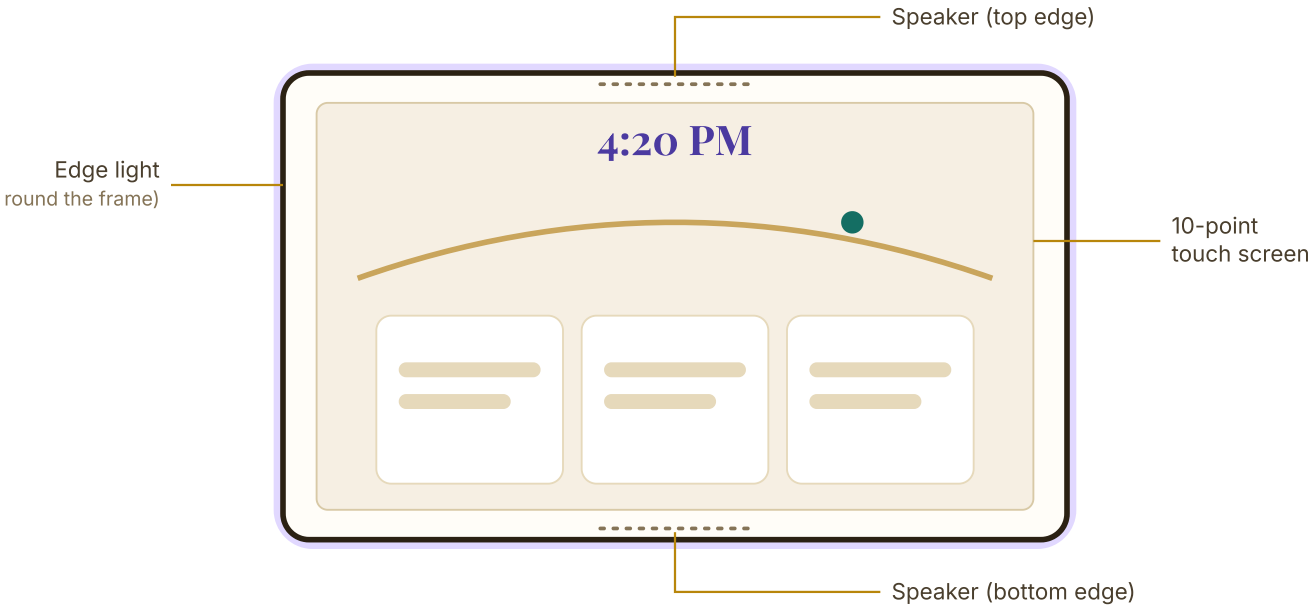

Front view (illustration). The Board is used in landscape. Speakers sit on the top and bottom edges, so the bracket never covers them.

The ports and the power button

All the connections sit together on one short edge of the Board, in a recess at the back, so nothing shows from the front. From the power button outward they are:

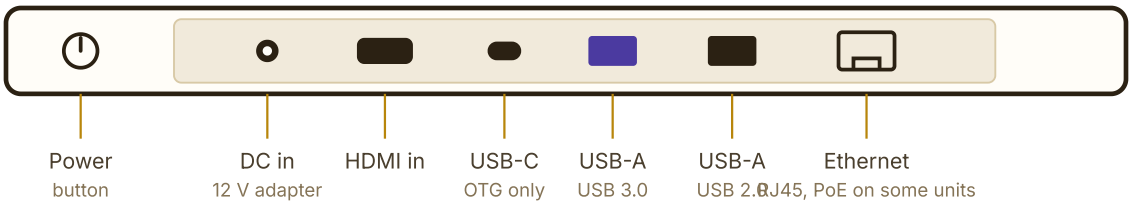

The connection edge (illustration, from the manufacturer's drawing).

Edge light	A soft light around the frame that AdabStars controls. See *Board Light* in chapter 10.
Microphones	The hardware has small microphone openings on one edge. AdabStars never uses them. See chapter 14.
Rear label	The model, the FCC ID and the power rating are on the label on the back of the Board.

3 Safety, placement and mounting

Please read this chapter before you mount or power on the Board. It keeps your family and your Board safe.

Important safety instructions

- **Adult installation required.** Mounting the Board is a job for an adult. Children should not help lift, hang or unplug it.
- **Fix the wall plate with all 6 supplied screws and drywall anchors.** Wherever a screw can go into a wall stud, put it there: the more screws in studs, the sturdier the mount (use longer wood screws in the studs). Check for hidden pipes and wires before drilling.
- **Use only the supplied power adapter.** Do not use a damaged cord or adapter. Keep the cord where it cannot be pulled or tripped over.
- **Keep the Board dry.** Do not mount it in a bathroom, near a sink or stove, or outdoors. Unplug it before cleaning.
- **Leave room to breathe.** Do not cover the Board or block the gap behind it. Keep it away from radiators, heaters, fireplaces and direct sunlight.
- **Glass and electronics inside.** Do not press hard on the screen, hang things from it, or let children climb near it. If the screen cracks, unplug the Board and stop using it.
- **No user-serviceable parts inside.** Do not open the Board. Contact support for repairs.
- **Room temperature only.** The Board is made for indoor use between 0 and 40 °C (32 to 104 °F) and 20 to 80% humidity. Do not push anything into the openings or ventilation slots, and keep it away from candles and open flames.
- **Two people to lift.** The Board is about the size of a large picture frame; have one person hold it while the other plugs in and hangs it.

Choosing a spot

Good places

- A hallway, kitchen or family room your children pass many times a day.
- At a height your children can easily reach and tap. The height is your family's choice: hold the Board up and let them try before you mark anything.
- Within reach of a power outlet, and in good Wi-Fi range.
- Where you would like to hear the athan. The Board's own speakers are made to carry it through the home.

Places to avoid

- Bathrooms, next to the stove or kettle, and damp rooms.
- Facing a sunny window (glare makes the screen hard to read).
- Above a heater or fireplace.
- A bedroom, if you prefer the edge light and screen to stay out of sleeping spaces.

Mounting on the wall

THE POWER SOCKET IS BEHIND THE WALL PLATE

You can't plug the Board in while the plate is on. Lay the Board face down on something soft, unscrew the **2 small screws on the side** and slide the plate off. Keep the screws. Plug the power cable into the Board just before you hang it on the plate (step 8 below), or before you slide the plate back on and refit the screws for the stand.

About 30 minutes. Two people make the last step easier. You'll need a drill with a **7/32 in** (about 5.5 mm) bit for the anchors, a screwdriver or drill driver, a tape measure, a pencil and a level. A stud finder is optional. Step-by-step pictures are at **adabstars.com/start**.

1. **Take the plate off the Board.** Lay the Board face down on something soft, like a towel. Unscrew the **2 small screws on the side** and lift the wall plate off. **Keep those 2 screws**: they go back in at the end.
2. **Choose the spot.** Pick a wall near a power outlet. The height is your family's choice: low enough that your children can easily reach and tap the screen.
3. **Center it on the wall.** Measure the wall's width, take away the Board's width (**20.5 in**, 52 cm), and halve what's left. That's the gap on each side. For example, on a 30 in wall: 30 − 20.5 = 9.5 in, and 9.5 ÷ 2 = **4.75 in on each side**. Mark where the Board's **right edge** will be.

4. **Place and level the plate.** The plate sits toward the **right side** of the Board (it covers about three quarters of its width), so put the **plate's right edge on your right-edge mark**, at the height you chose. Level it (bubble in the middle), then mark the **6 screw holes**. Use a stud finder: wherever one of the 6 screws can go into a wall stud, put it there. The more screws in studs, the sturdier the mount (use longer wood screws in the studs); the anchors hold the rest in drywall.

5. **Plan the power cable.** Simplest: the cable comes out through the opening in the middle of the plate's right edge, on the Board's right side, and runs down to the outlet, with no extra holes. To hide it: mark the plate's round cable hole too, cut one hole there and one just above the outlet, fit cable grommets (not included), and feed the cable in through the bottom hole first, pulling it up with a stick or string. **Leave some slack:** enough cable should come out of the wall to reach the Board's power socket while you hold the Board in front of the plate. You plug it in before you hang the Board, because you can't reach the socket once it's on the wall.

6. **Drill and fit the anchors.** Drill the 6 holes with the 7/32 in bit and push a plastic anchor into each one until it sits flush.

7. **Screw the plate to the wall.** Hold the plate on your marks and drive in the 6 screws, one at a time. Check it's level before the last one.

8. **Slide the Board on and lock it. Plug the power cable into the Board first:** once the Board is on the plate you can't reach the socket. Then slide the Board onto the plate so the plate's **3 tabs hook into the 3 slots** on the Board's back, and the plate's L-shaped edge fits along the Board's right side. Line up the holes on the **right side** and put the **2 small screws** back in. They hold the Board and plate together.

9. **Plug it in.** Plug the adapter into the outlet. The Board starts on its own. Continue with chapter 5.

HIDING THE CABLE SAFELY

Only the thin cable from the power adapter goes inside the wall, never an extension cord. If you're not sure, ask an electrician.

Cleaning and care

- Unplug the Board first. Wipe the screen and frame with a soft, dry microfiber cloth.
- For fingerprints, lightly dampen the cloth with water. Never spray liquid directly on the screen, and do not use glass cleaners, alcohol, ammonia or abrasive pads.
- Dust the gap behind the Board now and then so air can move freely.

4 Using the tabletop stand

Not ready to drill, renting, or want the Board on the kitchen counter for Ramadan? The tabletop stand holds the Board upright on any flat surface, with no holes in the wall. You only need a screwdriver to put it together.

Wall or stand?

Choose the wall when

- The Board has a permanent home in a hallway or family room.
- Small children are around: a wall-hung Board cannot be pulled over.
- You want the cleanest look, with the cable hidden.

Choose the stand when


- You cannot or would rather not drill (rentals, tiled walls).
- The Board moves between rooms, or comes out for Ramadan and Eid.
- You want to try a few spots before committing to one.

STABILITY FIRST


On a stand, the Board is a large sheet of glass and metal standing on its edge. Put it on a sturdy, level surface at least 15 cm (6 in) back from the edge, never on a tablecloth or runner that can be pulled, and keep the cable where nobody will trip on it or tug it. Children should tap the screen, not lean on it.

Setting up the stand

The stand is two white metal parts: a flat **base** with a raised **ledge** along one end, and an angled **back support** with a flat foot. They join with **3 small screws**.

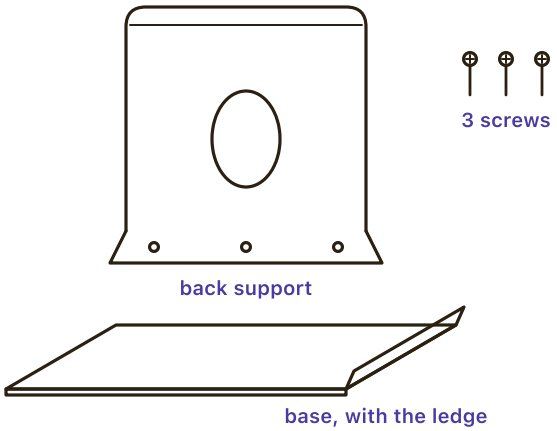


1. The two parts and the 3 screws.

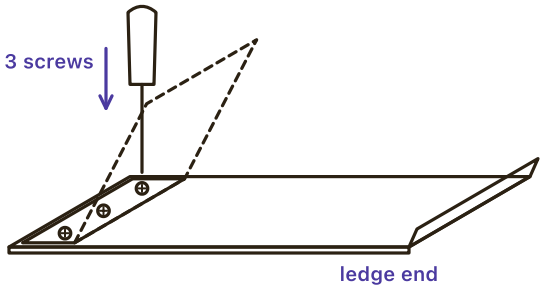


2 and 3. Foot on the end without the ledge, 3 screws in.

1. **Take out the stand.** Find the two stand parts and the 3 small stand screws in the hardware box.
2. **Line up the parts.** Lay the base flat, and set the back support's foot on the end of the base *without* the ledge, with its 3 holes over the 3 holes in the base.
3. **Screw them together** with the 3 small screws.
4. **Connect the power cable to the Board.** The socket is behind the wall plate, so lay the Board face down, unscrew the 2 small screws on the side and slide the plate off. Plug the cable into the Board, then slide the plate back on and refit the 2 screws. The plate stays on for the stand.
5. **Stand the Board on it.** In landscape (the wide way), rest the Board's bottom edge on the base against the ledge, and let it lean back on the support.
6. **Plug it in.** Plug the adapter into the wall. The Board starts up. Continue with chapter 5.

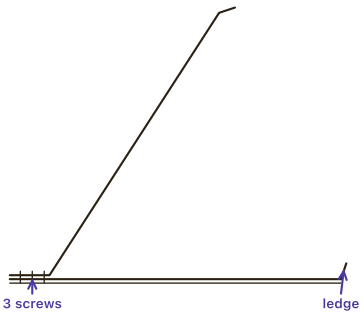

The assembled stand: screws at one end, ledge at the other.

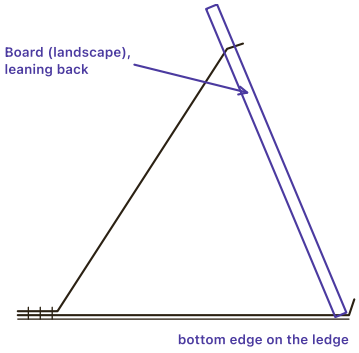

The Board leans back on the support, its bottom edge on the ledge.



The assembled stand (photo).

Once the Board is on the stand, press the screen gently near a corner: it should not rock, tip or slide. Keep the cable where nobody will trip on it or tug it.

A GOOD TABLETOP SPOT

Eye height for a seated adult is about right: a kitchen counter, a hallway console or a shelf your children can reach without climbing. Keep it away from the sink, the stove and anything that steams. The speakers are on the long edges, so leave the top and bottom of the Board clear and the athan will carry across the room.

Moving between the stand and the wall

You can switch later without any software changes: AdabStars does not care how the Board is held. Unplug the Board first, take it off the stand or the wall plate with two hands, and refit it the other way following chapter 3 or the steps above.

5 First-time setup

Setup takes about 15 minutes. You will connect the Board to Wi-Fi, create your family account with the registration code, add your children, and set your prayer location.

EASIEST WAY

Typing is quicker on a phone. Many families create the account on their phone first (section 5.3), then sign in on the Board.

5.1 Power on and Android's first-time screens

Plug in the supplied adapter (the Board's power socket is behind the wall plate: chapter 3 or 4). The first time the Board starts, Android shows its own short setup screens before AdabStars opens. Work through them like this:

1. **Language.** Choose your language and tap **Start**.
2. **Wi-Fi.** Choose your home network and type its password. (If you skip this, you can join Wi-Fi later; see 5.2.)
3. **Google account.** Signing in is optional. It lets Android keep its own system apps up to date.
4. **Screen lock: choose Skip.** When Android asks you to set a PIN, pattern or password, tap **Skip** (and **Skip anyway** if asked).
5. Accept the remaining screens. AdabStars then opens by itself.

IMPORTANT: NO SCREEN LOCK ON THE BOARD

With a screen lock, every time the Board restarts or the power blinks it waits on the lock screen until someone types the PIN. Until then AdabStars can't open and **the athan won't play**. Your settings are already protected by the AdabStars parent PIN (section 8.14), so the Board doesn't need one. If you set one by mistake, AdabStars shows a notice in Settings with a **Turn off the screen lock** button: enter the PIN and choose **None**.

AdabStars is the Board's home screen, so it comes back on its own after a restart or a power cut. If the Board is not online yet, you will see **You're offline**; join your Wi-Fi next.

5.2 Connect to Wi-Fi (or change networks later)

If you joined Wi-Fi during Android's first-time screens, you can skip this step. To join or change a network later, use the Board's Android settings:

1. Swipe down from the very top edge of the screen to show Android's quick settings, then open **Wi-Fi** (or tap the gear icon, then **Network & internet**).
2. Choose your home network and type its password.
3. Return to AdabStars with the **Home** button. On the **You're offline** screen, tap **Try again**. The Board also checks by itself every 15 seconds and opens your board as soon as it is online.

WIRED CONNECTION

The Board has an Ethernet port on its connection edge. If Wi-Fi is weak where it hangs, you can plug in a network cable instead; it connects on its own, with nothing to set up.

5.3 Create your family account

Already have an AdabStars account? Skip to 5.6 and sign in. Otherwise, on your phone or on the Board, go to **app.adabstars.com** and tap **New here? Create a family**.

1. If you're asked for a **registration code**, enter the one from the card in your Board box (**ADAB-XXXX-XXXX**). Dashes and capital letters are optional. The code never contains the letters O or I, so read those as zero and one.
2. Enter your email address and choose a password (at least 6 characters).
3. Tap **Create account**.

YOUR BOARD INCLUDES THE FAMILY PLAN

A Board registration code unlocks **6 months of the AdabStars Family plan** from the day you create your family. See chapter 13 for what that includes and what happens afterwards.

5.4 Name your family and pick your board address

Next, AdabStars asks for your **Family name** and **Your family URL**. The URL is your family's private board address, for example **app.adabstars.com/noor**. Leave it blank to make one from your family name. Tap **Create my family**.

Save your recovery code

Your family's private information is encrypted, and AdabStars now shows you a **recovery code** (five groups of five letters and numbers). It is a backup way to unlock your family's data on a new device.

Copy it into a password manager or write it down somewhere safe, tick **I've saved this code somewhere safe**, then tap **Continue**. You will only see it once, though you can make a new one later in Settings.

5.5 The welcome steps

A short guided setup appears the first time you open your board:

1. **Add your first kid.** Enter a name, pick an emoji or a photo, and choose a color. The date of birth is optional. Tap **+ Add another kid** for each child, then **Continue**. No children at home? Choose the family board option (prayer times, weather and schedule only).
2. **Where's your family?** Search for your city, or tap **Use My Location**. This sets accurate prayer times and weather. Until you set it, AdabStars uses Dallas, TX.
3. **Add some starter tasks?** Tick the ready-made bundles you like: Morning Hygiene, Islamic Daily Habits, Sunnah Extras (Bonus), Seasonal Fasts, Homework & School and Household Chores. You can edit everything later.
4. **Add starter rewards?** Tick a few rewards. You set the prices later.
5. **You're all set!** Tap **Go to my board**. A short guided tour shows you around.

Prefer to set things up at your own pace? Tap **Use the classic checklist** during the welcome steps, or open the setup checklist from **Help** later.

5.6 Sign in on the Board

If you created your account on your phone, sign in on the Board with the same email and password. The Board stays signed in from then on, even after a restart.

5.7 Make the Board kid-proof


The Board is designed for children to tap. These settings keep little hands on their tasks and out of your settings:

- **No Android screen lock.** Keep the Board's own screen lock off (see 5.1), so AdabStars and the athan start by themselves after a power cut. Use the AdabStars parent PIN instead.
- **Parent PIN** (Settings › Account & Family › **Parent PIN**): a 4 to 8 digit PIN the Parent Console asks for. The family board itself stays open. See section 8.14.
- **Hide the settings gear** (Settings › Family Board › **Hide the settings gear from the board**). You can still reach the settings by pressing and holding the board clock for about 1.5 seconds.
- **Return to the board when idle** (Settings › Family Board). If the Parent Console or Hifdh is left open on the Board, it goes back to the board on its own after a few minutes, so it never covers the board or the athan.

5.8 Finish setting up

- **Test the athan.** In the Parent Console, open Settings › **Prayer & Athan** and tap **Test** once on the Board. See chapter 9.
- **Invite your spouse** or another guardian (Settings › Account & Family › **Invite Parent**). They get their own sign-in and share the same kids, tasks and rewards. This is part of the Family plan.
- **Put AdabStars on your phone** for approvals on the go. See chapter 11.

6 The Board at a glance

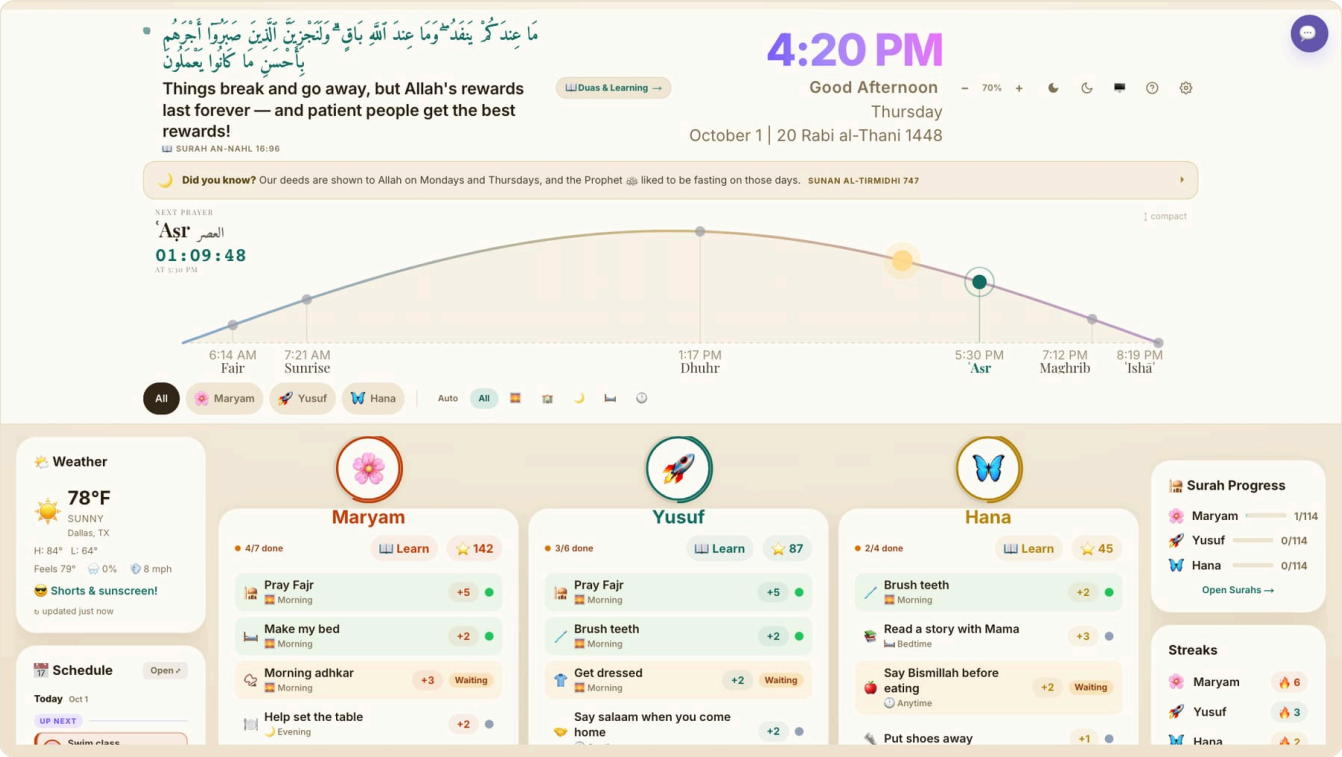

The family board on a weekday afternoon. (Sample family: Maryam, Yusuf and Hana.)

The header

- **The daily quote** (top left): a verse, hadith or du'a in Arabic with a kid-friendly meaning and its reference. Tap it, or the **Duas & Learning** button beside it, to open the library. Parents choose the source in Settings › Family Board › **Daily Quote**.
- **The clock and greeting**, with the date and the Hijri (Islamic) date side by side. On Fridays the board greets everyone with **Jummah Mubarak!**
- **Islamic announcements**: a gold strip for occasions such as a Ramadan countdown, Eid greetings, or a "Did you know?" fact with its source.
- **The prayer arc**: the day from Fajr to Isha as a sunrise-to-sunset curve, with a live countdown to the next prayer. Tap **compact** to shrink it to a small bar and give the task cards more room.

The icons at the top right

Icon	What it does
− 70% +	Makes everything on this Board bigger or smaller. It is saved on this device only.
Moon	Opens the prayer screensaver right away.
Sun / moon	Switches between the light and dark look. On the automatic day and night setting, a tap only lasts until the next Fajr or Maghrib, so kids cannot change your saved choice.
Screen	Switches the layout between the wall (desktop) view and the phone and tablet views.
?	Opens the in-app Help guide.
Gear	Opens the Parent Console (protected by your PIN if you set one).

FOR PARENTS

Press and hold the board clock for about 1.5 seconds to open Parent Settings. This works even when you have hidden the gear or all the top-right icons.

The filter bar

Below the prayer arc, tap a child's name to show only their tasks (tap it again for everyone). The time pills show **All** tasks, a single part of the day (Morning, Afternoon, Evening, Bedtime, Anytime), or **Auto**, which follows the time of day for you.

Each child's card

- **Avatar and name**, with a ring that fills as tasks are done, and a count such as **4/7 done**.
- **Learn** opens Duas & Learning with that child already selected.
- **The star balance**. Tap it to open the child's **My Stars** page.
- **Today's tasks**, each with its emoji, part of the day, star value, and a colored status:

Status	Meaning
To Do	Not done yet.
Waiting	Your child marked it done and it is waiting for a parent.
Approved	A parent approved it and the stars were added.
Try again	A parent sent it back, sometimes with a short note. Your child can do it again.

A 🔒 beside the stars means the task belongs to a "finish all to earn" part of the day: its stars arrive together once every task in that part of the day is approved. A small 🔥 number shows a task's own streak.

The side panels

The panels on the left and right are called widgets. Parents can move them, reorder them or turn them off in Settings › Family Board › **Widgets**.

- **Weather**: current conditions, high and low, and dress advice such as "Shorts & sunscreen!". Tap the card for the hourly forecast, tap again for the week. Tap the temperature to switch between °F and °C. Tap **updated ... ago** to refresh.
- **Schedule**: the family's upcoming events. Tap **Open** for the full family schedule with agenda, week and month views.
- **Prayer Times**: all five prayers. It appears when the prayer arc is compact.
- **Salah Today**: each child's prayers for today, with **Open tracker**.
- **Surah Progress**: how many surahs each child has memorized.
- **Hifdh today**: for children who use Hifdh, a dot for today's sabaq, sabqi, manzil and focus (an empty ring is not started, gold is started, green is done). Tap a child to open their Learn page.
- **Streaks** and **Reward Progress**: each child's daily streak, and how many stars they still need for their next reward.
- **League**: your family league's standings (Family plan, see section 8.11).
- **Game Night**: a QR code that starts a family game on your phones (below).

Game Night

Game Night turns your phones into a family game, started from the Board. The card sits near the top of the left column, under Weather, and shows a QR code with a four-letter room code beneath it.

Joining from a phone

1. Tap the Game Night card. The code fills the screen, with your family's names beside it.
2. Point a phone's camera at the code and tap the link that appears.
3. Tap your name. There is no password and nothing to type: every phone joins as your family.
4. The first phone in is the host and picks the game. Tap **Done** on the Board when everyone is in.

The code stays good all evening, and the Board starts a fresh room on its own every few hours. Tap **New room** on the full-screen code to start one right away.

Starting from your phone. You can also start Game Night without the Board: in the Parent Console, open Family › **Game Night**. Play on your phone and let the others scan your screen to join.

The games

Party games are played together with everyone on their own phone. They suit older kids and grown-ups and work best with three or more phones.

- **Off-Limits Words** (four or more, two teams): get your team to guess the secret word without saying any of the five off-limits words on the card. The other team watches and buzzes if you slip.
- **Fill in the Blank** (three or more): everyone fills in the blank with the funniest card from their hand, and a judge picks the winner. The judge changes every round.

Tap the back arrow at the top of the room for six more games that run on one phone you pass around or read aloud: **Draw It!** (one player sketches a secret word while their team races to guess it before the timer runs out), **Charades**, **Scavenger Hunt**, **Simon Says**, **Hangman** and **Family Trivia**.

- **Three levels**: **Little ones** (ages 3 to 5), **Kids** (6 to 9) and **Big kids +** (10 and up). You can switch level in the middle of a game and keep the score.
- **Islamic words**: mixed in with the others by default. Tap **Islamic only** before you start to play with Islamic words alone.
- **Teams, timers and scores**: up to four teams, each with its own players. The game takes turns for you so everyone gets a go.

Game Night is just for fun: scores stay in the game and never change your children's stars. If you want to reward the winners, give bonus stars yourself.

Turning it off. Settings › Family Board › **Game Night QR**. The card disappears from the board, and you can turn it back on any time.

Day and night

By default the board uses a light theme during the day and a darker one at night, switching at Fajr and Maghrib. Parents pick both looks in Settings › Family Board › **Board Theme**.

7 Everyday use for kids

The Board works best when children do the tapping themselves. Marking their own tasks done is the heart of the reward.

Checking off a task


1. Find your card and tap the task you finished. It turns amber and says **Waiting**, and a little message such as "MashaAllah! ⭐ " pops up.
2. Tapped by mistake? Tap the waiting task again to undo it.
3. When a parent approves it, the task turns green and a gold star-burst celebrates the stars you earned.

Some tasks don't need a parent: a parent can switch approval off for a task, and then its stars arrive straight away.


FOR LITTLE ONES

For children aged 4 and under, **Speak & confirm tasks** is on by default: the Board reads the task aloud and asks for a second tap to confirm. Parents can change it for each child in **Kids**.

My Stars

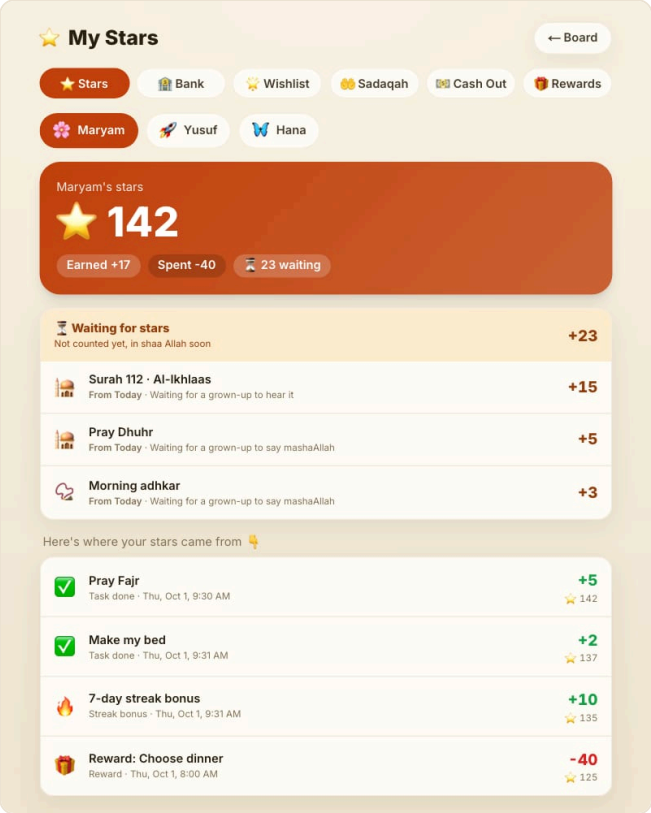

My Stars: the balance, what is still waiting, and where every star came from.

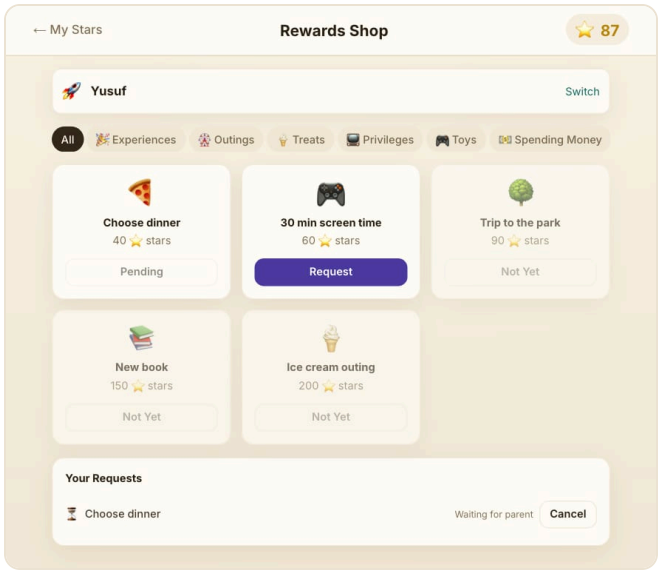

The Rewards Shop.

Tap your star balance on the board to open **My Stars**. The tabs across the top are **Stars**, **Bank**, **Wishlist**, **Sadaqah**, **Cash Out** and **Rewards**.

- **Waiting for stars** lists everything that is done but not counted yet, with the day it is from: tasks waiting for a grown-up, memorization waiting to be heard, and stars held until a whole part of the day is finished.
- **The history** shows every star in and out: tasks, bonuses, streak bonuses, memorization and rewards. When a task was approved later, it reads like "Done Tue · Star given Sat".

These pages go back to the board by themselves after 5 minutes without a touch.

The Rewards Shop

1. Open **Rewards** from My Stars (or the board's rewards link) and check that your name is shown at the top.
2. Rewards you can afford have a **Request** button; others say **Not Yet**.

3. Tap **Request**. It shows under **Your Requests** as waiting for a parent, and you can **Cancel** it until then. When a parent approves, the stars are taken from your balance.

Parents can limit a reward (for example, once per day). A reward that doesn't need approval is given instantly, with a celebration.

Wishlist

Children can add things they are dreaming of with **+ Add a wish**, with no price, a dollar goal, or a star goal. Star one wish as **Make it my #1 goal**. A progress bar shows how close you are, and says **You can get this!** when you have saved enough. Granting a wish is up to a parent.

Bank (Family plan)

When a parent turns on the Kids' Bank, the Bank tab shows your real money in four jars: **Spend** (cash to use now), **Save** (set aside for later), **Invest** (money that can grow over time) and **Share** (set aside to give as sadaqah). **What I have** adds up Spend, Save and Invest.

If a parent allows it, children can add their own money with **+ Add money**. **Split into my 4 jars** spreads a deposit across the jars automatically. If a parent wants to check each entry first, it waits under **Waiting for a parent to approve** until they do.


Sadaqah

1. On the **Sadaqah** tab, tap **Give Sadaqah**.
2. Choose a cause from the list your parents allowed (for example your local masjid), and how much to give: from your stars, or from your Spend or Share jar on the Family plan.
3. Tap **Ask a parent**. A parent reviews it, then sends the real donation and marks it given.

Cash Out

On the **Cash Out** tab, a child can ask a parent to turn some stars into real cash. The tab shows your family's rate (for example 15 points for $1). Nothing changes until a parent approves.

Duas & Learning

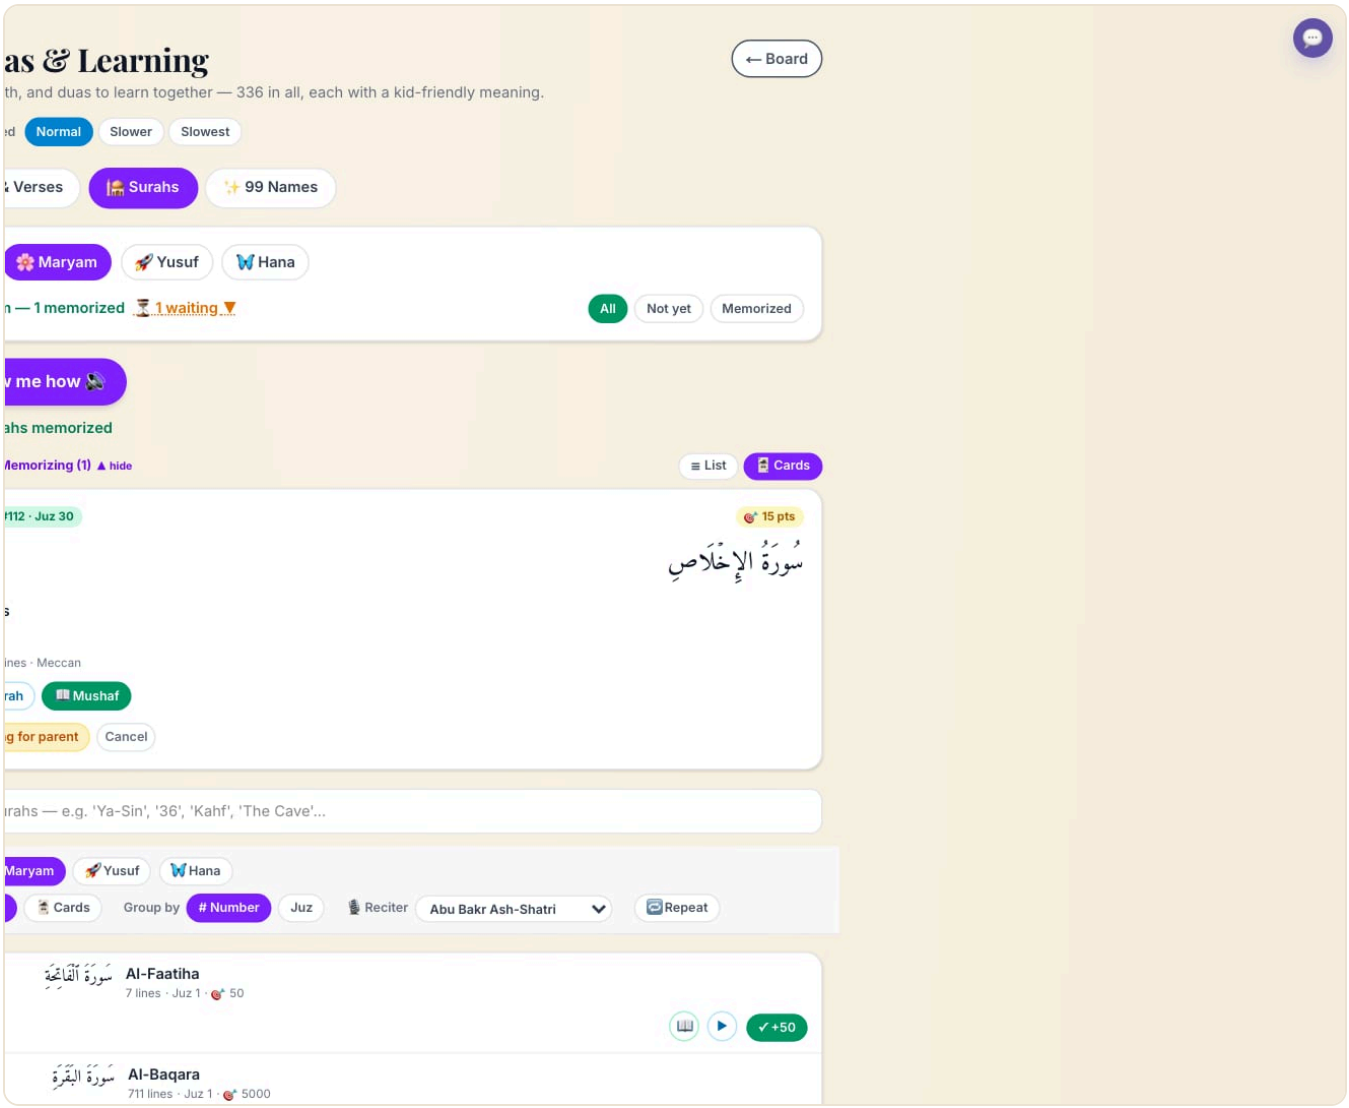

Duas & Learning, on the Surahs tab.

Open it from the **Learn** button on your card or by tapping the daily quote. Choose the learner at the top, and a listening speed (**Normal**, **Slower** or **Slowest**). There are three tabs:

- **Duas & Verses**: Qur'an verses, hadith and du'as in sections such as Morning adhkar, Night & before sleep, Salawat, Ayatul Kursi and the 3 Quls. Tap **Listen** to hear one, then **I memorized this** when you know it by heart. It waits for a parent to listen, then the stars arrive.
- **Surahs**: all 114 surahs, with recitation, a choice of reciters and a repeat button. Long surahs are memorized part by part; each part is claimed separately, or all at once with **Memorized the whole surah**. The bonuses are big and grow with the surah's length.
- **99 Names**: every Name of Allah with its Arabic, transliteration and meaning, and a simple tip on when to call on it. Tap a Name to hear it. Children mark each Name as memorized for a parent to approve.

At the top, **Show me how** starts a short, read-aloud walkthrough, so even children who can't read yet can follow along.

Play on the Board or on your speakers

The Qur'an plays on the Board unless you choose otherwise. On the Board, the **Play on…** button beside a surah (and in the Mushaf reader) lets you pick **This Board** or Google Home and Nest speakers on the same Wi-Fi, with its own speaker volume. The button always shows where it is playing, for example **Playing on: This Board**. The Board remembers your choice until you switch back. In the reader, the speakers start at the ayah you tap and stop at the end of the part you opened (this needs Board app 1.8.6 or later; older versions play the whole surah from the start). Speakers are part of the Family plan, and the athan always comes first: the recitation stops a minute before each athan.

The Mushaf reader

Tap **Mushaf** on a surah to open the Madani page and hear it recited with the current ayah highlighted (and the current word, for reciters that support it). Tap any ayah to recite from there. The player has play and pause, previous and next ayah, **Options** for repeating each ayah or the whole range, speed, reciter, and choosing a range by ayah or by touching lines on the page. The recitation pauses by itself when the athan starts.

Today's Hifdh

If your family uses the Hifdh companion (section 8.12), Duas & Learning shows each child's **Today's Hifdh**: *Sabaq* (today's new lesson), *Sabqi* (recent, still settling), *Manzil* (older review) and *Focus* (tricky ayahs). Tap one to open it in the Mushaf and listen along. Checking and marking stay with parents in the Hifdh app.

Salah tracker

Open it from **Salah Today** on the board. Each child sees five big prayer buttons: tap a prayer when you have prayed it (tap again to undo). A 🔥 shows each prayer's streak and **This week** shows the last seven days. A prayer a parent has already approved shows a 🔒 and can't be undone.

The five daily prayers are added for every child automatically. For a child who is too young, a parent can turn off **Track daily prayers** in **Kids**.

Leagues (Family plan)

If your family has joined a league, children open it from the board to see friendly standings for prayer streaks, Qur'an-reading streaks and short Islamic quizzes. Only nicknames and emoji avatars are ever shown to other families. Quizzes can be read aloud with the 🔊 button.

8 For parents: the Parent Console


The Parent Console is where you approve, set up tasks and rewards, and change settings. Open it from the gear on the board, from your phone at app.adabstars.com, or by holding the board clock.

8.1 Finding your way

On a computer or the Board, the menu runs down the left side: **Approvals**, **Check Off**, **Tasks**, **Rewards**, **Kids**, **Wish List**, **Points**, **Bank**, **Calendar**, **Leagues**, **Duas & Learning**, **Hifdh**, **Settings**, **Get Started**, **Help** and **What's new**. **Family Board** at the top takes you back to the board. On a phone, the five most-used pages sit in a bar at the bottom and the rest are under **More**.

Search settings at the top of the menu finds any option: type a word like "PIN", "Fajr" or "screensaver", and tap a result to jump straight to it. Every page also has a **Tour this page** button.

8.2 Approvals

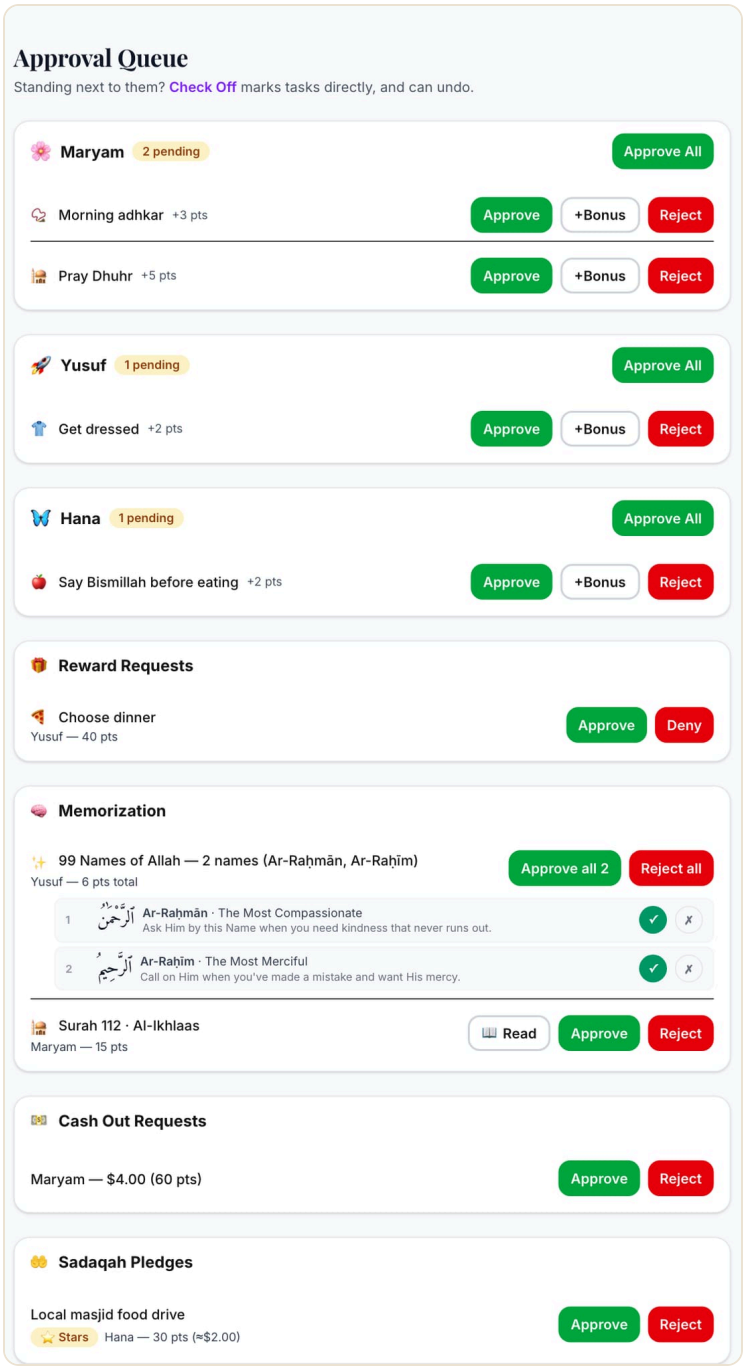

The Approval Queue holds everything waiting for you, in one place.

- **Tasks**, grouped by child: **Approve**, **+Bonus** (approve and add 1 to 10 extra stars) or **Reject** (with an optional reason your child will see). **Approve All** approves a child's whole list. Tasks wait up to 14 days for you, and a day approved late still counts toward streaks.
- **Reward Requests**: **Approve** takes the stars; **Deny** declines it and no stars are taken.
- **Memorization**: surahs, du'as and the 99 Names. Tap **Read** to see the ayahs while your child recites, and quiz them on the spot. Names claimed together arrive as one group you can approve all at once


or one by one.

- **Money requests** (Family plan): deposits, withdrawals and loans your children entered themselves, when you require approval.
- **Cash Out Requests** and **Sadaqah Pledges**. After you approve a pledge, it moves to **Sadaqah: waiting to be sent** until you make the real donation and tap **Mark fulfilled**.
- **This Week** (Family plan) shows each child's completion and stars, and **Bonus Points** lets you award stars for going above and beyond, or make a gentle adjustment.

8.3 Check Off

Check Off shows every child's tasks for today. Tap a task to mark it done and award the stars on your child's behalf, for example when you did it together; tap again to undo. Tasks your child already marked say "kid marked done, tap to confirm". Use the child filter and **Hide done** to focus.

Forgot yesterday? Use the ‹ › arrows to step back (up to 30 days). Stars count toward that day, so streaks stay intact. Tap **Back to today** when you are done.

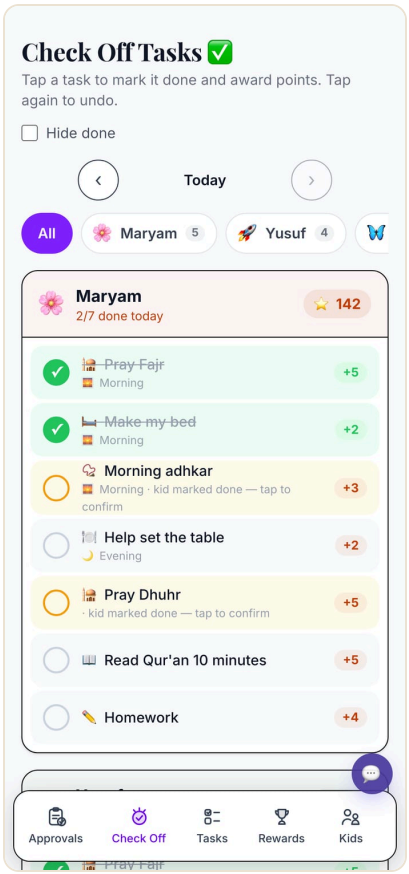

Check Off on a phone.

8.4 Tasks

Tap **+ New Task**. For each task you choose:

- **Title** and **Icon Emoji**, for example "🪥 Brush teeth".
- **Assign to**: one child, several, or **All**.
- **Time Block**: Morning, Afternoon, Evening, Bedtime, Anytime, or one of your own.
- **Category** and **Points** (a guide: daily habit 1 to 2, chore 2 to 5, effort 5 to 15, big achievement 20 to 50).

- **Schedule**: every day, specific days of the week, or one date only.
- **Link** (optional): shows a small 🔗 on the board, for example to a surah's recitation.
- **Requires parent approval**: on by default. Turn it off for tasks that should award stars straight away.

Quick Add Presets add whole bundles in one go: Morning Hygiene, Islamic Daily Habits, Sunnah Extras (Bonus), Seasonal Fasts, Homework & School and Household Chores. Seasonal fasts (Ramadan, the Day of Arafah, the Day of Ashura and six days of Shawwal) appear on the board by themselves on the right days of the Islamic year. You can edit a built-in bundle; edited and custom bundles are saved on the device you made them on.

Drag tasks to reorder them (in the **By Time** view); the order carries through to the board. **Select** lets you delete several tasks at once. A task with history is switched off instead of deleted, so earned stars and streaks stay safe.

Streak bonuses

At the bottom of the Tasks page, **Streak Bonuses** rewards consistency. Set how many approved tasks make a day count, how many days in a row earn a bonus, and how many bonus points to give, then tick which tasks count. Give one special habit (like reading Qur'an) its **Own streak** with its own cadence and bonus. Prefer pure encouragement? Turn streak bonuses off.

"Finish all to earn" parts of the day

In Settings › Tasks, Points & Bank › **Time Blocks**, you can rename parts of the day, change their start times, or add your own (such as "Weekend"). Tap the 🔒 next to a block to make it mandatory: its tasks earn no stars until every one of them is done and approved that day, then all the stars arrive together. It suits things that belong together, like all five prayers.

8.5 Rewards

Build your family's own reward catalog with **+ New Reward**: a name, a cost in points, a category, an emoji, whether it needs your approval, and an optional limit (for example once per day or per week). Mix small daily treats with bigger save-up goals. A reward where you donate in your child's name is a lovely option too.

8.6 Wish List

See and manage every child's wishes: add ideas for them, **Mark granted** when a wish comes true, or **Make it a reward** to put it in the shop. Handy for Eid and birthday gift ideas.

8.7 Points history and undo

Points shows each child's full history with a running balance and who approved each entry. **Undo** on any entry reverses it: a task or memorization goes back to the approval queue, and a reward refunds its points.

8.8 Kids

Add, edit and reorder children. Each child has a name, an emoji or photo (photos are cropped to a circle and stored privately), a color and an optional birthday, plus three switches:

- **Track daily prayers**: adds the five daily prayers to the Salah Tracker (on by default).
- **Simple mode**: hides the star jar, streak flame and rewards shop for this child, for an older child who just wants a plain checklist and calendar.
- **Speak & confirm tasks**: reads each task aloud and asks for a second tap (on by default for ages 4 and under).

+/- Pts adjusts a balance with a reason. Deleting a child removes all their tasks, stars and rewards for good, so AdabStars asks you to type the child's name first.

Cash Out: turning points into real money

Tap **Cash Out** on the Kids, Points or Bank page, enter a dollar amount and an optional note. The matching points are taken at your family's rate (Settings › Tasks, Points & Bank › **Points per dollar**, 15 points to $1 unless you change it), and you hand over the cash. Children can also ask from their own Cash Out tab; those requests wait in your Approval Queue.

8.9 Kids' Bank (Family plan)

The Bank is a four-jar money wallet for each child (Spend, Save, Invest and Share) that teaches real money habits. Open **Bank settings** to:

- Turn the Bank on, and choose whether children may add their own deposits and withdrawals.
- **Require my approval** for children's own entries, so each one waits in your Approval Queue.
- **Allow loans**: let a child spend a little more than their Spend jar holds, as a loan you approve. Their next deposit pays it back first.
- Set the **Deposit split** across the four jars (it must total 100%).
- Choose the **Sadaqah Charities** children can pick from. "My local masjid" and "Other" are always available.

From the Bank page you log deposits and withdrawals (with an optional automatic split), move money between jars, record what an investment is worth now, and give sadaqah. Only a parent can move money back out of the Share jar.

8.10 Calendar

Add family events with **+ New Event**, subscribe to school, masjid or activity calendars by their iCal (ICS) link with **+ Subscribe**, or **Upload .ics** a calendar file. Events can belong to one child (and take their color) or to the whole family, and you can hide an event from the board's Schedule. Subscribing to calendar feeds is part of the Family plan.

Subscribed calendars **refresh by themselves every hour**, so new or changed school and masjid events reach the Board without you opening the Parent Console. Tap **Sync Now** whenever you want them right away. Each feed keeps the next three months and the last two weeks of events; the events you add yourself are never touched by a refresh.

Each feed has its own color. Its events show a matching dot and the feed's name (for example "ASA basketball" next to "PSA basketball") on the Board's Schedule card, in the full calendar and on the Calendar page, so two similar feeds never look alike. Colors are picked for you; to choose your own, tap the color circle next to a feed. The full calendar also reopens in the view you used last on that device (Agenda, Week or Month).

8.11 Leagues (Family plan)

Leagues are friendly competitions with cousins and friends on daily prayer streaks, daily Qur'an-reading streaks and short Islamic quizzes. Streaks reward staying consistent, never how much anyone worships.

1. Open **Leagues** and choose **Create a league** (or **Join a league** with an invite code).
2. Give your family a nickname, then add each child with a league nickname and an emoji avatar. Other families only ever see nicknames, emoji and scores, never real names or photos.
3. Share the invite code with the families you want to invite.
4. Pick how the standings look on the board: List, Spotlight, Podium, Streaks or Chase.

8.12 Hifdh

The **Hifdh** menu item opens **hifdh.adabstars.com**, already signed in. It is a Qur'an memorization companion: it tracks what each child has memorized, builds the daily sabaq, sabqi and manzil, and lets you mark mistakes ayah by ayah, or word by word, while you listen. Anything memorized there comes back to the board as a memorization claim for you to approve for stars.

8.13 Settings

Settings opens on a short list. Tap a row to open its page:

- **This Board** (only on the Board itself): display size, Board Light, this Board's athan volume and speakers, the Qur'an speakers, and Board app updates.
- **Family Board**: the board's look and theme, screensaver, widgets, daily quote, clock and weather, Islamic announcements, Game Night and returning to the board when idle.
- **Prayer & Athan**: location, calculation, the athan and Friday Surah Al-Kahf (chapter 9).
- **Tasks, Points & Bank**: time blocks, points per dollar, streaks, bank rules and resets.


- **Account & Family**: your profile and password, the Parent PIN, inviting a parent, privacy, encryption and Plan & Billing.

Under **Help & support** on the same page you'll find the **Guided tour**, **Feedback** (tell us about a bug or an idea, with a screenshot if you like) and **Send diagnostics**, which shares a support code with us when something isn't working. The settings index at the end of this guide lists every option.

RESETS

Settings › Tasks, Points & Bank has the reset options (a child's points, or family data). They cannot be undone, so the biggest ones ask you to type a word first.

8.14 Parent PIN

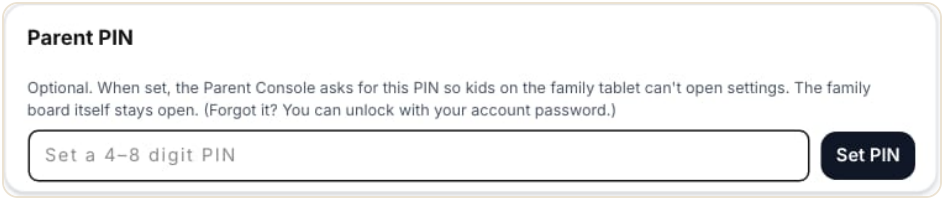

Set a 4 to 8 digit PIN in Settings › Account & Family › **Parent PIN**. After that, opening the Parent Console asks for it, so children on the family Board can't change settings, while the board itself stays open for them. Once unlocked, the console stays open while you use it, and locks again when you leave it. Your PIN is stored only as a scrambled code, never as the digits themselves.

Forgot your PIN? Tap **Forgot PIN?** and enter your account password, then set a new PIN in Settings.

8.15 What's new

Every update to AdabStars is listed under **What's new** in the menu (just below Help), with dates and your current app version. A **NEW** badge appears when there is something you haven't seen yet.


9 Prayer times and the athan

The Board shows the day's prayer times and plays the athan when each prayer arrives. Everything here is in Settings › **Prayer & Athan**, unless noted. The Board's own athan volume and your speakers are in Settings › **This Board**.


9.1 Getting prayer times right

- **Prayer Location**: search your city or full address, or tap **Use My Location**. You can also type the latitude and longitude.
- **Time Zone**: detected from your location; change it if needed.
- **Calculation Method**: ISNA by default. Other methods include Muslim World League, Umm al-Qura (Makkah), Egyptian General Authority, Karachi, Gulf Region, Kuwait, Qatar, Singapore, France, Turkey (Diyanet), Russia and the Moonsighting Committee.
- **Asr Calculation**: Shafi or Hanafi. The page shows today's Asr time under each, so you can see the difference. Reload the board after switching.

These settings sync to all your family's devices. If your local moon sighting differs by a day, use **Hijri date adjustment** on the same page.

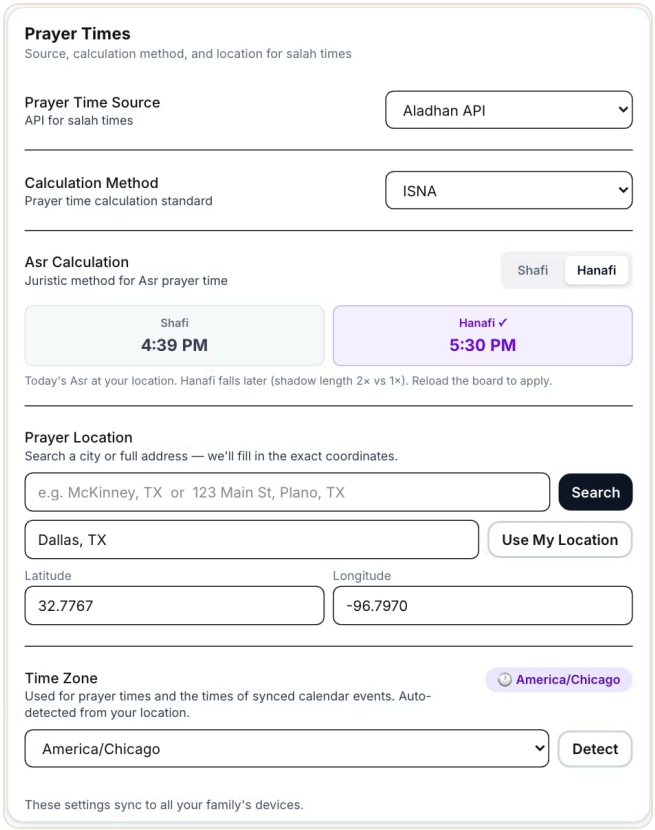


9.2 Athan settings

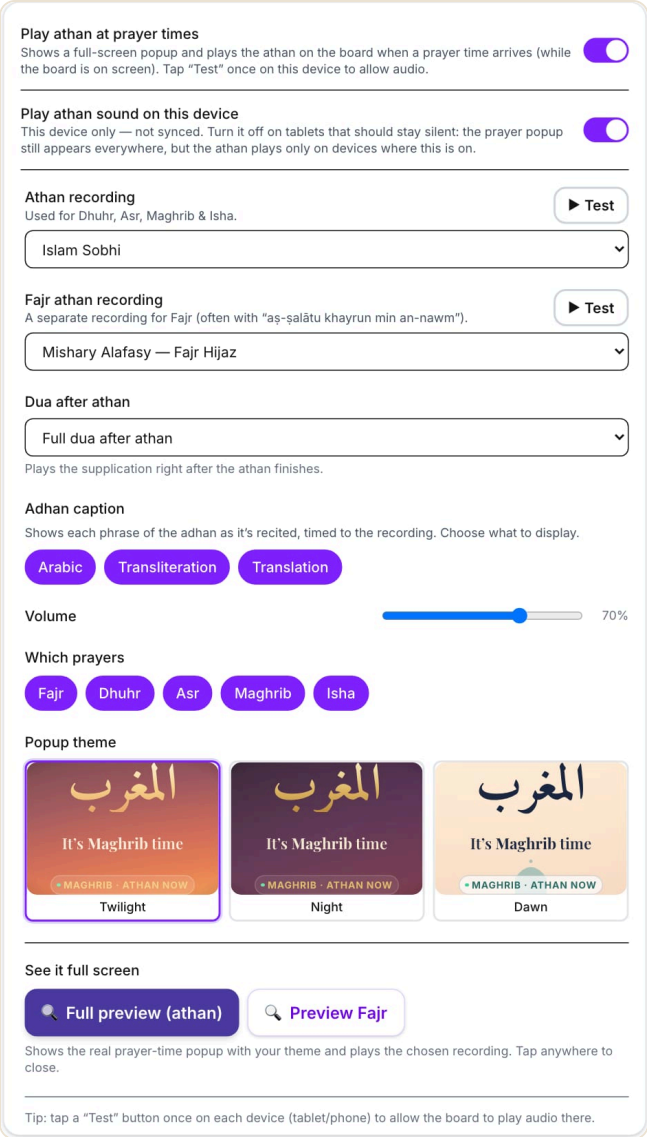

- **Play athan at prayer times**: shows the full-screen athan and plays it when a prayer time arrives.
- **Play athan sound on this device**: turn it off on any tablet or phone that should stay quiet. The athan screen still appears there.
- **Athan recording** (for Dhuhr, Asr, Maghrib and Isha) and a separate **Fajr athan recording**, each with a **Test** button.
- **Dua after athan**: none, short or full.
- **Adhan caption**: show the Arabic, transliteration and translation of each phrase as it is recited.
- **Volume** (saved on each Board, so turning one Board down never mutes another), **Which prayers**, and the **Popup theme** (Twilight, Night or Dawn).
- **Full preview**: see and hear exactly what will happen at prayer time.

> **TIP**
>
> Tap a **Test** button once on each device the first time. That gives the device permission to play sound.

9.3 When a prayer arrives

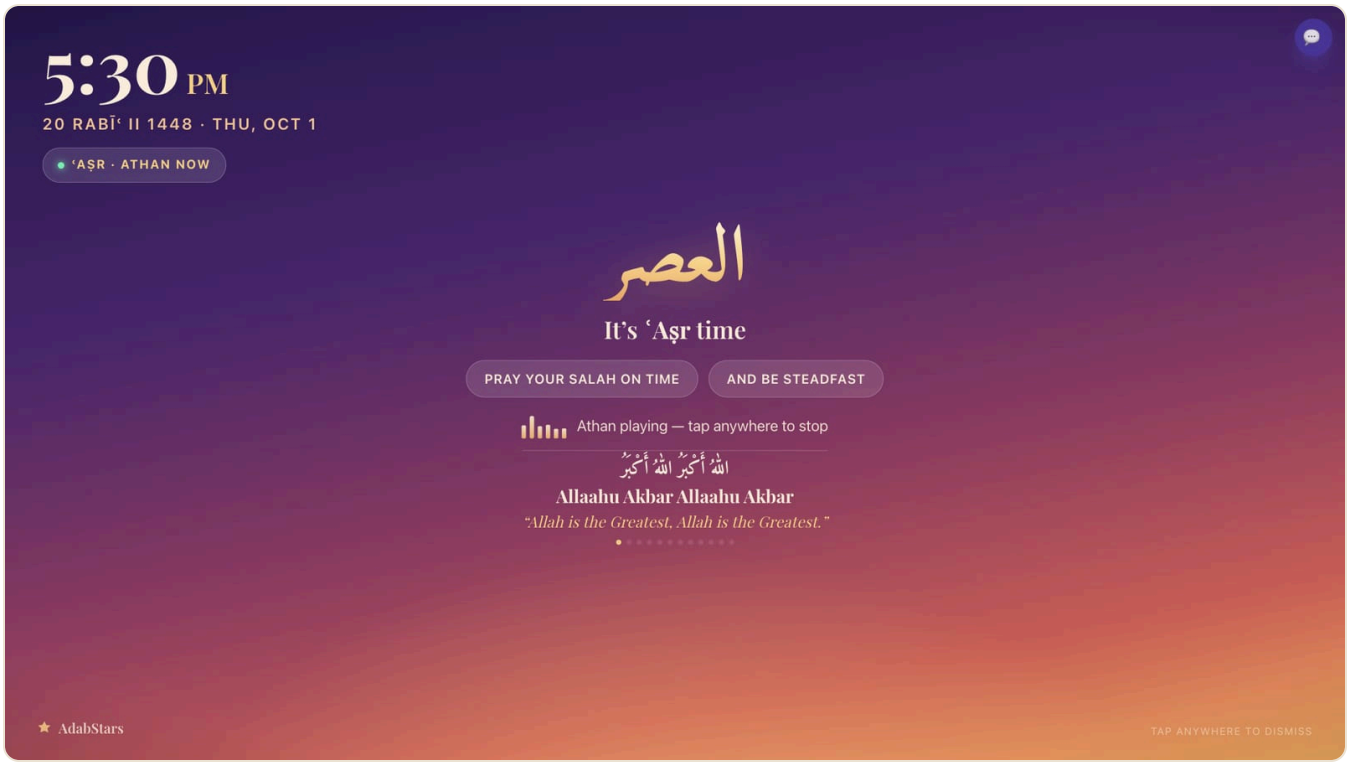

The athan screen at Asr, with the follow-along caption.

At each of the five prayers the Board shows a full-screen athan with the prayer's name and plays your chosen recording, while the caption follows along phrase by phrase. Tap anywhere to stop and close it. Closing it on one screen doesn't affect the others. If the Board was asleep, the athan still plays when it wakes, as long as that is within 30 minutes of the prayer time.

The athan plays even when the Parent Console is open on the Board, and any Qur'an recitation pauses for it.

9.4 Athan history

At the bottom of Settings › Prayer & Athan, **Athan history** shows whether each prayer actually sounded over the last 7 or 30 days, where it played (this board, your speakers, or the tablet's own alarm), and how late it was. When a prayer didn't sound, it tells you why, for example that no board was awake at that time, or that the prayer's athan is switched off. History is kept for 60 days and is visible only to your family.

9.5 Athan on your speakers (Family plan)

The Board can play the athan on your Google Home or Nest speakers and speaker groups at the same moment, so the call to prayer is heard throughout the home. This card appears on the Board itself (not

on phones), in Settings › This Board › **Athan on your speakers**.

1. Turn on **Athan Everywhere**.
2. Tap **Discover speakers** and tick the speakers or groups to use. They must be on the same Wi-Fi as the Board.
3. Choose how the Board itself behaves: **Always plays here**, **Auto** (stays quiet while your speakers play) or **Never** (speakers only). If the Board is in the same room as a speaker, Auto or Never avoids an echo; the **Fine-tune board delay** slider helps if you choose Always.
4. Tap **Test athan**.

IN SYNC IN EVERY ROOM

Separate speakers don't play perfectly together. For synchronized sound, create a speaker group in the Google Home app (Add, then Create speaker group), then pick the group here.

Pre-prayer reminder. With Athan Everywhere on, a gentle chime sounds 15 minutes before each prayer (you can choose 5 to 30 minutes), on the Board and your speakers. Choose **Just the speaker's chime** to hear only the speakers' own sound.

Per-prayer choices (**Where each prayer plays**, in Settings › This Board) let you set each prayer separately: where it plays (speakers or this tablet), its volume, its athan and du'a, whether it gets the reminder, and which speakers. For example, a gentle Fajr in the bedroom while Dhuhr carries through the house. Each prayer has its own **Test**. These choices are saved on the Board you set them on.

If the speakers accept the athan but don't start playing, the Board plays it itself so your family still hears it. The Board sends the athan to your speakers from its own saved copy over your home Wi-Fi, so it keeps working during an internet outage; if the speakers can't reach the Board, it uses the online copy instead.

Each Board chooses its own speakers. The Athan Everywhere switch, the speakers you tick and the per-prayer choices belong to the Board you set them on. Turning it off while setting up a second Board never turns it off on the first, so one Board can play on the home speakers while another plays on its own. Athan history shows what each Board did at every prayer.

Google, Google Home, Google Nest and Chromecast are trademarks of Google LLC. AdabStars is not affiliated with, sponsored by, or endorsed by Google.


9.6 When the internet is down

The Board keeps upcoming prayer times and your athan settings on the tablet itself. If the internet drops, or even if the app has to restart, the tablet's own alarm still plays the athan at each prayer time using your usual recording and du'a. A few things wait for the internet to come back: the pre-prayer chime, per-prayer recording choices, and casting to speakers (in Auto mode, the Board plays the athan itself when it can't reach them).

TIP

Because the offline athan uses the tablet's alarm, keep the Board's **alarm volume** turned up in Android's sound settings.

9.7 Fridays: Jumu'ah and Surah Al-Kahf

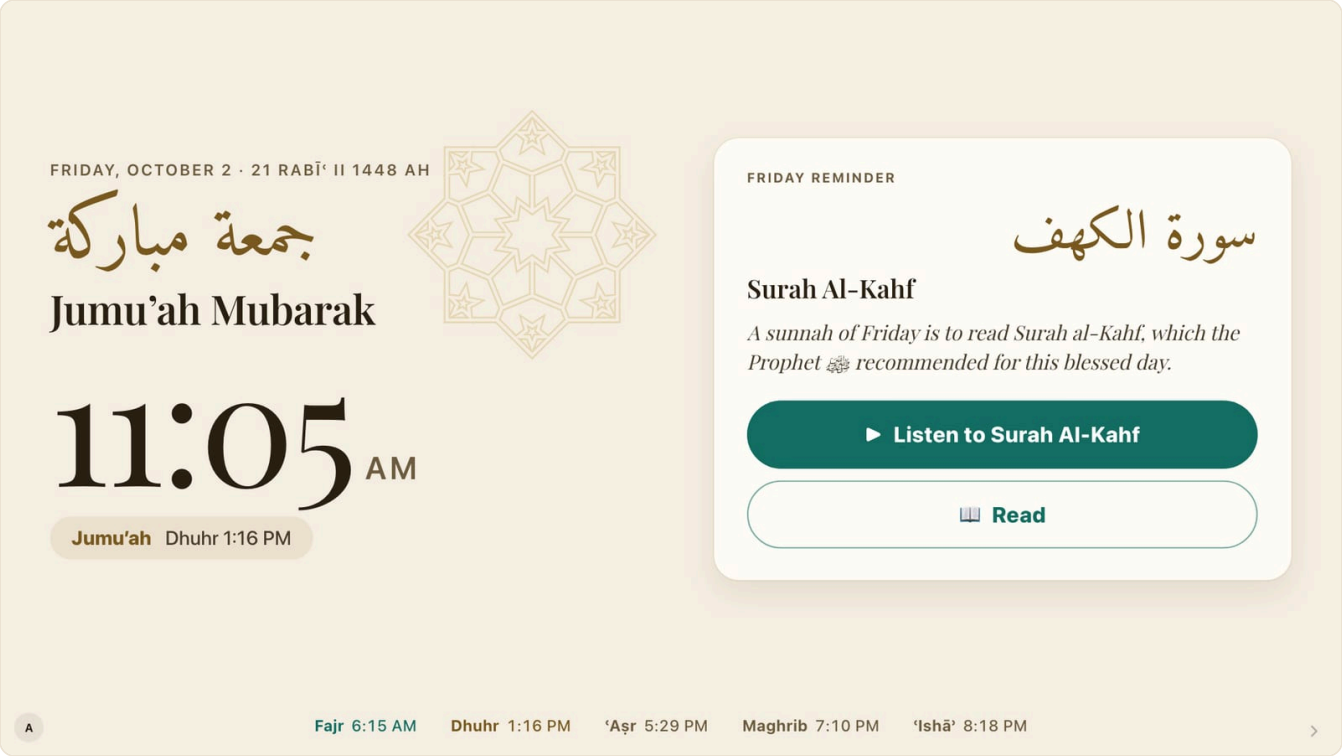

Every Friday the screensaver becomes a Jumu'ah screen.

- **Jumu'ah screensaver on Fridays** (on by default): the screensaver shows Jumu'ah Mubarak, the date, today's Dhuhr time and a Surah Al-Kahf reminder with **Listen to Surah Al-Kahf** and **Read** buttons. After it has been played that day, it shows a small "Listened today" tick. It replaces your chosen screensaver style for the day.
- **Surah Al-Kahf on Fridays** (off until you turn it on): the Board plays Surah Al-Kahf every Friday at a time you choose (10:00 AM to start). If the Board is asleep at that minute, it still starts when it wakes within half an hour. It plays once per Friday on each Board.
- **Reciter**: choose who recites Surah Al-Kahf and tap **Preview** to hear a few seconds. Other surahs keep each device's own reciter.
- **Where it plays**: **On the board**, with the Mushaf open so everyone can follow along, or **On your speakers** (Family plan). Tap **Choose speakers** to pick them; they are the same speakers the Qur'an player uses (chapter 7). With speakers set up, the Friday screen offers both: **Play on your speakers** or **Listen on the board**, plus a Stop button. "On the board" always plays on the Board, even if the Qur'an player was last set to speakers.


The athan always comes first. Surah Al-Kahf stops on the speakers just before the athan (or its reminder chime), and pauses on the Board when the athan starts. If the speakers can't be reached, it plays on the Board instead.

Surah Al-Kahf is in Settings › Prayer & Athan, and the Jumu'ah screensaver in Settings › Family Board. You will also find a Friday Surah Al-Kahf task in the Islamic Daily Habits bundle, and on Fridays the "Did you know?" banner opens Surah Al-Kahf right on the board.

9.8 Islamic announcements

The board marks the Islamic year for you: a Ramadan countdown, Eid greetings, and a rotating "Did you know?" fact for special days such as Ashura, Arafah and the first ten days of Dhul-Hijjah. On Eid and during Ramadan the screensaver shows a festive greeting too. In Settings › Family Board › **Islamic Announcements**, choose where they appear: **Banner strip**, **On the daily quote**, or **Off**.

10 The screensaver and display

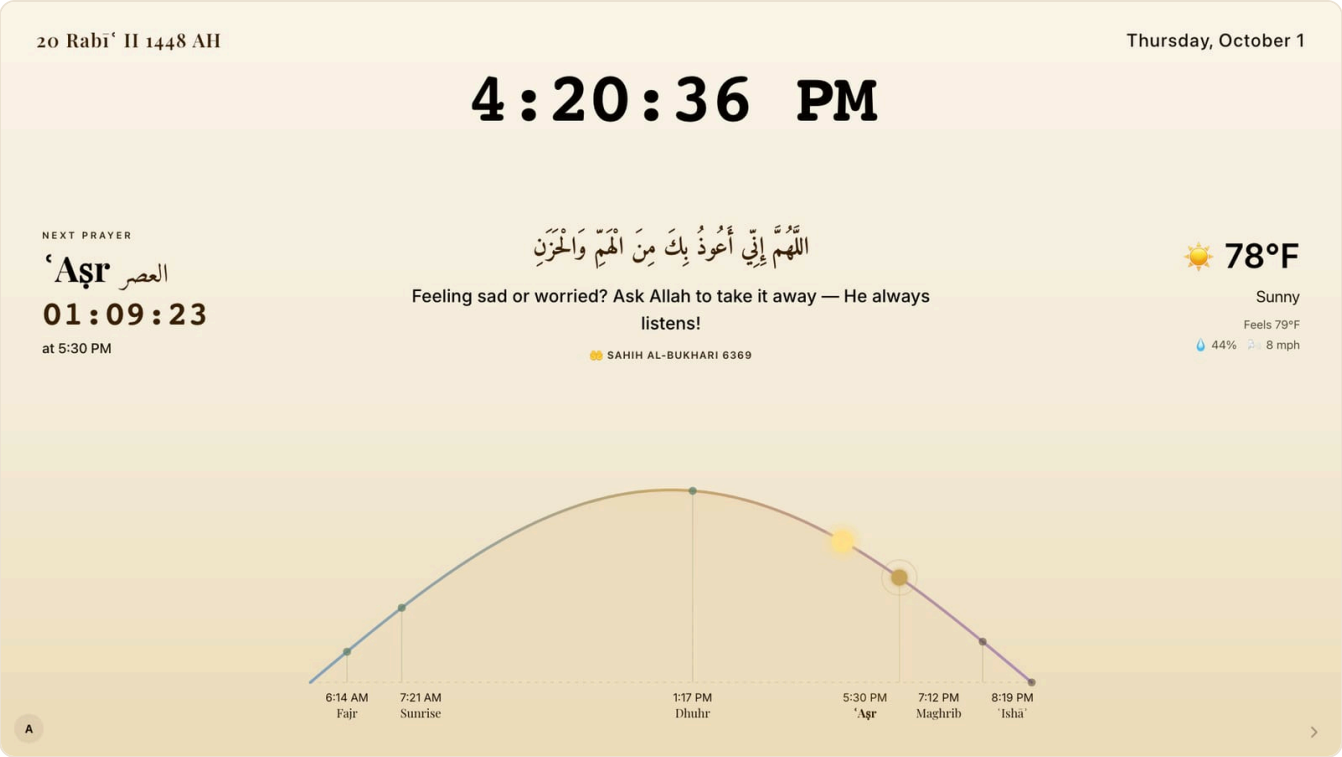


The Horizon screensaver: clock, next prayer, the day's prayer arc, a daily reminder and the weather.

10.1 The prayer screensaver

When nobody has touched the Board for a while (2 minutes to start), it drifts into a full-screen prayer display that is easy to read from across the room. Tap anywhere to go back to the board. The moon button at the top of the board opens it any time.

- **Start after idle for**: 15 or 30 seconds, or 1, 2, 5, 10 or 30 minutes (Settings › Family Board).
- **Screensaver style**: eighteen styles, each showing the live prayer times, clock, Hijri date and weather in its own way: Horizon, Sahifa, Al-Asmāʾ (the 99 Names of Allah through the day), Kalimāt (a word clock in English and Arabic), Misbaḥa and Misbaḥa II, Qamar and Qamar II (with the real moon phase), Mishkāt, Mawāqīt Departures, Zellij (eight-point star tilework laid in as each prayer passes), Bustān and Bustān II (gardens whose flowers open prayer by prayer), Riḥla (with a qibla compass), Ṣaff, and three made for little ones: Star Sky, Prayer Train and Lantern Night. Every style has a **Preview** button that shows it full screen; tap anywhere to come back.
- Late at night (10 PM to 5 AM) the screensavers move more gently and less often while your family sleeps.
- **Rotate through several styles**: pick favorites and let the Board take turns, either a different one each day or the next one each time it appears.

- The small button in the bottom-left corner of the screensaver switches between automatic, light and dark. Your choice lasts until the next sunrise or Maghrib.

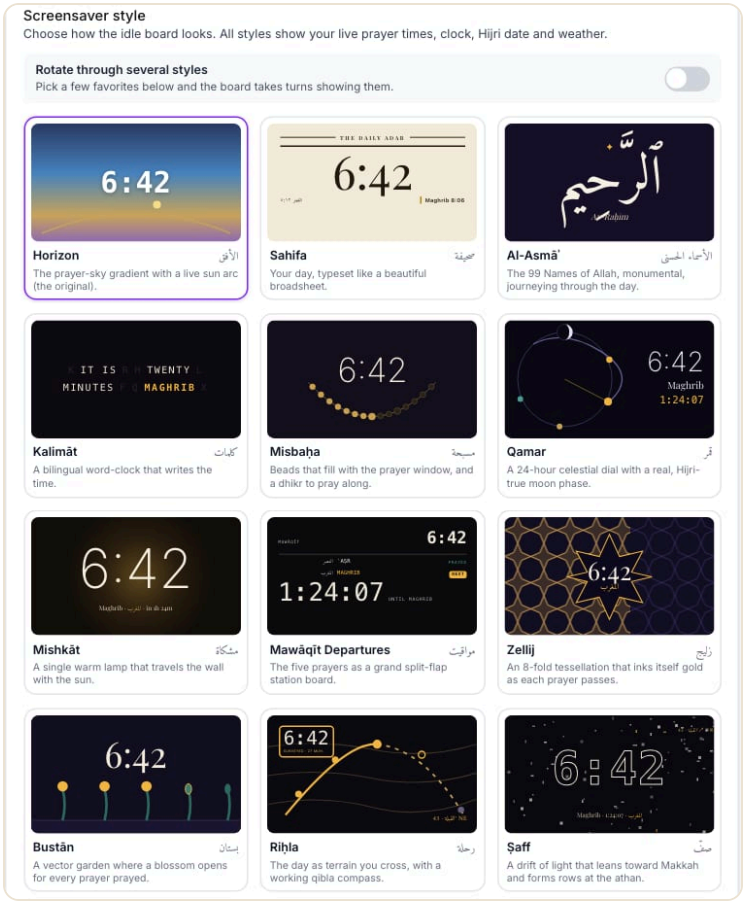

Settings › Family Board: the screensaver styles.

10.2 Board theme

In Settings › Family Board › **Board Theme**, pick a daytime theme and a nighttime theme. With **Auto day & night** the board switches between them at Fajr and Maghrib. **Family board mode** (for households with no children) hides chores, points and rewards and shows a clean prayer, weather and schedule board. Some themes are part of the Family plan.

The same page has more fine-tuning: task density and font size, spacing, **High Contrast Mode**, and which features show on each child's card.

10.3 This Board

On the Board, Settings starts with a **This Board** row. Its settings belong to this Board only:

- **Display size (zoom)** scales everything on this Board, from 60% to 100% (70% to start).
- **Board Light**, this Board's athan volume, **Athan on your speakers** and **Where each prayer plays**.
- **Update the Board app**, when an update is waiting (chapter 12).

- A warning if an Android screen lock was set by mistake, with a button to turn it off (see 5.1).

If anything looks stuck, tap **Refresh the app** in Settings. The screen stays on by itself (Settings › Family Board › **Keep screen on**).

10.4 Board Light

Boards with a light around the frame show **Board Light** in Settings › This Board:

- **Edge light**: pick a color and brightness, or choose **Follows prayer times**, which changes the glow before each prayer, at prayer time and at night. Keep it low if the Board is somewhere you sleep. These are saved on each Board.
- **Athan light**: the light pulses before each prayer and during the athan.
- **Approval night light** (off to start): after Isha, if the kids sent in tasks that still need your OK, the light breathes gently in the color you pick until you have checked them.
- **Update light** (on to start): the light breathes red during the day when a Board app update is ready, and stops once the update is done.

11 Using AdabStars on your phone

Your whole family board is also at **app.adabstars.com**. Sign in with the same email and password on any phone, tablet or computer.

11.1 Get the AdabStars iPhone app

1. **Scan the code with your iPhone's camera** and tap the link that appears.
2. Install **AdabStars** from the App Store.
3. Open it and sign in with the same email and password you use on the Board.

Or open **apps.apple.com/us/app/adabstars/id6825105001**, or search for "AdabStars" in the App Store. The same code is on the Board in **Settings** and in **Help**.


Android, or rather not install an app? There is no Android app yet. Add AdabStars to your home screen instead, as its own icon:

- **Android (Chrome)**: open app.adabstars.com, tap the ⋮ menu, then **Install app** (or Add to Home screen).
- **iPhone or iPad (Safari)**: open app.adabstars.com, tap the **Share** button, then **Add to Home Screen**.

11.2 One-tap approvals

The iPhone app opens straight to **Approvals**. On Android, for the same shortcut, open **app.adabstars.com/parent/dashboard** in Chrome and add it to your home screen as above. Name it "AdabStars Approvals". Prefer tapping tasks off yourself? Use **/parent/live** (Check Off) instead.

On a phone, the Parent Console has a bar at the bottom with **Approvals**, **Check Off**, **Tasks**, **Rewards** and **Kids**, and everything else under **More**. It follows your phone's own light or dark setting.

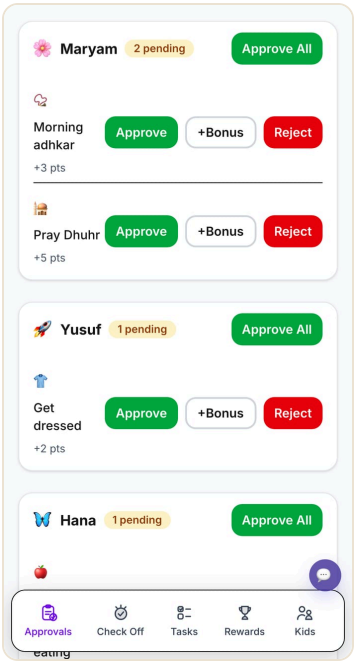

Approvals on a phone.

11.3 The athan on phones

The athan plays wherever the family board is open on screen. To keep a phone or a second tablet quiet, open Settings › Prayer & Athan on that device and turn off **Play athan sound on this device**. Only that device changes.

11.4 The board on a phone

The board fits a phone screen too, with weather, prayer times and rewards tucked into panels. It is at its best on the Board or a larger tablet, so children can tap their own tasks.

12 Keeping the Board up to date

Most improvements reach your Board automatically, with nothing to install. Occasionally the Board app itself has an update, and the Board lets you know.

12.1 Installing a Board app update

1. When an update is ready, a card appears in the corner of the board: **An update is ready**. If your Board has the edge light, it also breathes red during the day.
2. Tap **Update now**. The update downloads, then Android asks you to confirm the install. Tap **Install**.
3. The Board restarts into the new version. That's it.

If Android ever closes AdabStars, for example while it installs a system update overnight, the Board opens it again by itself within a few minutes, and an athan the tablet played on its own in the meantime still shows in Athan history as played.

Not a good time? Tap **Later** and the Board reminds you tomorrow. If an update waits for two weeks, the reminder moves to the middle of the screen (you can still close it). You can also install it from Settings › This Board › **Update the Board app**, whenever an update is waiting.

THE FIRST UPDATE

The first time, Android may ask you to allow AdabStars to install apps. Tap **Settings**, switch on **Allow from this source**, go back, and tap **Update now** again. Android may also take a moment to scan the update before installing. Both are normal and happen only occasionally.

To see which version your family's app is on, open **What's new** in the Parent Console menu.

13 Your plan

AdabStars has two plans. All the Islamic features are included in both. Your Board's registration code includes 6 months of the Family plan.

Free	Family
• 1 child on the family board • Athan, prayer times and the salah tracker • Hijri calendar, Qur'an, du'as and memorization • Sadaqah, stars, streaks and the rewards shop • Up to 5 custom tasks and 3 rewards (prayers and Islamic tasks are always unlimited) • A selection of board themes	• Everything in Free, plus: • Your speakers: the athan and reminder chime (Athan Everywhere), and the Qur'an, including Friday Surah Al-Kahf • Unlimited children, tasks and rewards • Kids' Bank • Leagues • All board themes for day and night • Calendar sync from school and masjid feeds • Weekly insights for each child • A co-parent with their own sign-in

After your included months. If you don't continue with the Family plan, your family moves to the Free plan. Nothing is deleted: children, tasks and rewards above the Free limits are hidden, and they come back if you renew.

Managing your plan. Plans and billing are managed on the web, not on the Board. Sign in at **app.adabstars.com** on a phone or computer and open Settings › Account & Family › **Plan & Billing**. Your plan covers the whole family and every device.

Current plans and prices are always at **adabstars.com**. Prices are not printed here because they can change.

14 Privacy and your family's data

Your board and everything on it is private to your family.

14.1 Encryption

Your family's most sensitive information is encrypted on your own devices before it is saved: children's and parents' names and birthdays, your home location, notes and comments, bank notes, wish list items, and sadaqah and cash-out notes. On your signed-in devices it unlocks automatically.

- New families are encrypted automatically at sign-up. Families who joined before encryption was available can switch it on in Settings › Account & Family with **Secure My Data**.
- Your **recovery code** is a backup way to unlock your data on a new device. If a device ever asks, open the encryption card in Settings › Account & Family and choose **Unlock another device**, then enter the code. You can make a new code there too (the old one then stops working).
- Task titles, reward names, emoji and calendar events are not encrypted, so they can show quickly on the board.

14.2 Photos and leagues

Children's photos are kept in private storage and shown only to your family. Leagues never show photos or real names to other families, only the nicknames and emoji you choose.

14.3 Usage data

AdabStars can collect anonymous usage data to learn which features families use. You can turn this off in Settings › Account & Family › **Share anonymous usage data**.

14.4 Microphones and camera

The Board has no camera. The hardware does contain microphones (the manufacturer fits them as standard), but the AdabStars app does not ask Android for microphone access and does not record audio, so they are never used.

14.5 Privacy policy

Read our full privacy policy at **adabstars.com/privacy** and terms at **adabstars.com/terms**. To see, download or delete your family's data, or to close your account, email **privacy@adabstars.com** from the address you signed up with. We reply within 30 days.

15 Troubleshooting and questions

Start with the simplest fix: in Settings, tap **Refresh the app**. If that doesn't help, unplug the Board for ten seconds and plug it back in.

The athan didn't play

- Open **Athan history** in Settings › Prayer & Athan. It says whether the prayer sounded and, if not, why.
- Check that **Play athan at prayer times** is on, the prayer is ticked under **Which prayers**, and **Play athan sound on this device** is on for the Board.
- Tap **Test** once on the Board, and check its volume.
- Using speakers in **Never** mode? Then the Board stays silent by design. Make sure the speakers are on the same Wi-Fi and tap **Discover speakers** again in Settings › This Board.

Prayer times look wrong

Check the **Prayer Location**, **Time Zone**, **Calculation Method** and **Asr Calculation** in Settings › Prayer & Athan, then reload the board. For a Hijri date that is a day off, use **Hijri date adjustment** on the same page.

The Board says "You're offline"

Check your Wi-Fi (chapter 5.2). The Board checks again every 15 seconds and reopens your board by itself. If the internet drops while the board is open, it keeps showing your last board with an offline notice, and any tasks the kids tap are saved and sent when you are back online. The athan still plays from the tablet's own alarm.

Everything looks too big or too small

Use the − + zoom at the top of the board, or Settings › This Board › **Display size (zoom)**. If Android's own display size or font size was changed, set them back to Default in Android settings.

My child's stars didn't arrive

Open their **My Stars** page: the **Waiting for stars** card shows what still needs a parent's approval, and what is held until a "finish all to earn" part of the day is complete.

Sign-in, password and PIN

- **Forgot your password?** On the sign-in screen tap **Forgot password?** and follow the emailed link.
- **Forgot the parent PIN?** Tap **Forgot PIN?** and enter your account password.
- **Registration code not accepted?** Check each character (there is no letter O or I). Each code works once. If it still fails, contact support with a photo of the card.

An update won't install

Allow AdabStars to install apps when Android asks (chapter 12), then tap **Update now** again. Make sure the Board is online during the download.

The kids keep opening settings

Set a Parent PIN and consider hiding the settings gear (chapter 5.7).

Can I use the Board as a normal Android tablet?

Yes. AdabStars is set as the Board's home screen, but you can change that in Android settings under **Apps**, **Default apps**, **Home app**. Choose AdabStars again to go back.

Still stuck?

In Settings, tap **Send diagnostics** and share the support code with us, or tap **Feedback**. You can also email us (chapter 18). It helps to tell us your app version (from **What's new**) and what you see on screen.

16 Specifications

Display	21.5-inch IPS, 1920 × 1080, 10-point capacitive touch, 250 nits, 3000:1 contrast
Processor	Rockchip RK3576S, 8-core
Memory and storage	4 GB RAM, 32 GB storage
Operating system	Android 14 (open source), with the AdabStars app preinstalled as the home screen
Wireless	Wi-Fi 6 (802.11ax, 2.4 and 5 GHz), Bluetooth 5.4
Audio	Two 5 W speakers (4 Ω)
Camera	None
Microphones	Four, fitted by the manufacturer; not used by AdabStars
Edge light	RGB light around the frame, controlled by AdabStars
Connections	DC power in, HDMI 2.0 input, USB-C (OTG only), USB-A 3.0, USB-A 2.0, Gigabit Ethernet (RJ45; PoE IEEE 802.3at on units ordered with it)
Power	External adapter, model FJ-SW20171204000: input 100 to 240 V~ 50/60 Hz 1.5 A, output 12 V ⎓ 4.0 A (48 W). No user-replaceable battery.
Orientation	Landscape
Mounting	Wall plate included (held to the Board by 2 side screws), with 6 screws and 6 drywall anchors. Tabletop stand included (2 parts, 3 screws)
Size	520.6 × 312.5 × 27.5 mm (20.5 × 12.3 × 1.1 in)
Frame color	White
Operating conditions	0 to 40 °C (32 to 104 °F), 20 to 80% humidity; store between −20 and 60 °C
Model	AdabStars Board (WA2189T)
FCC ID	2ABC5-E0107

17 Safety and regulatory information

The AdabStars Board (model WA2189T) is certified under FCC ID **2ABC5-E0107**. The statements below are the ones the FCC rules and the grant require. Keep this guide with the Board.

FCC compliance information

FCC Supplier's Declaration of Conformity: compliance information
Product: AdabStars Board, model WA2189T.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Responsible party (U.S.): ADABSTARS LLC, Allen, Texas, USA, support@adabstars.com, https://adabstars.com
FCC ID: 2ABC5-E0107

FCC statements

Warning (§15.21): Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note (§15.105(b)): This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC radiation exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm (8 in) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The 20 cm condition is the grant condition for FCC ID 2ABC5-E0107 (the Board was evaluated as a mobile device under the MPE method, report "MPE" in the certification file). In everyday use the Board hangs on a wall or stands on a surface, well beyond 20 cm from where people sit and sleep; the separation matters only while someone is standing

at the screen. The grant covers 2402 to 2480 MHz (Bluetooth), 2412 to 2462 MHz (Wi-Fi 2.4 GHz) and 5180 to 5240 and 5745 to 5825 MHz (Wi-Fi 5 GHz); it carries no indoor-only restriction.

The FCC ID and the statement above are printed on the label on the back of the Board.

Power, mounting and care

- Use only the supplied power adapter (12 V ⎓ 4.0 A, model FJ-SW20171204000, 100 to 240 V~ 50/60 Hz input). The adapter family is UL certified to UL 62368-1 (file E303985).
- Adult installation required. Fix the wall plate with all 6 supplied screws and drywall anchors (chapter 3); wherever a screw can go into a stud, put it there for the sturdiest mount. On the tabletop stand, keep the Board on a stable surface away from the edge.
- Indoor use only. Do not expose the Board to moisture, and do not place anything filled with liquid on or near it. Do not use or store it above 40 °C or below 0 °C.
- Do not push objects into the openings. Do not hit the screen or place heavy or sharp objects on it. Do not attempt repairs yourself; contact support.
- This product contains no user-replaceable battery.
- Made in China. Distributed by ADABSTARS LLC, Allen, Texas, USA.
- Disposal: do not put the Board in household waste. Many states and retailers run electronics recycling programs; search "electronics recycling" with your city or county, or email support and we will point you to one near you.

Trademarks

Google, Google Home, Google Nest and Chromecast are trademarks of Google LLC. AdabStars is not affiliated with, sponsored by, or endorsed by Google. Android is a trademark of Google LLC. AdabStars and the أدب mark are trademarks of ADABSTARS LLC.

18 Warranty and support

Limited warranty

12-Month Limited Warranty. ADABSTARS LLC warrants the AdabStars Board against defects in materials and workmanship for 12 months from the date it is delivered to the original buyer.

- **What we do:** if the Board arrives defective (tell us within 14 days of receiving it) or develops a defect within 12 months, contact us. Once we receive the unit and confirm the defect, we replace it at no cost, or, if a replacement is not available, repair it or refund what you paid.
- **How to claim:** email support@adabstars.com with your order number (or where you bought it) and a short description or photo of the problem. We send return instructions and a prepaid shipping label for a confirmed defect.
- **Not covered:** damage from misuse, accident, liquid, unauthorized repair or opening the case, power surges, or a fall caused by a wall fixing that was not suitable for the wall. Using a different wall mount or stand does not void the warranty.
- The software and Family plan are covered by our Terms at adabstars.com/terms, not by this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Returns

We don't accept returns unless the Board is defective. If your Board arrives with a defect, tell us within **14 days of receiving it**: email support@adabstars.com with your order number and a short description or photo of the problem. Once we confirm the defect, we'll send the instructions. Please keep the original box and all its parts until then.

Contact us

Email	support@adabstars.com
Web	adabstars.com
Company	ADABSTARS LLC, Allen, Texas, USA

When you contact us, please include your family's board address (for example app.adabstars.com/yourname), your app version from **What's new**, and a photo of the screen if something looks wrong.

19 Index of settings

Where to find each option in the Parent Console. You can also type any of these names into **Search settings**.

Setting	Where (in Settings unless noted)
Adhan caption	Prayer & Athan
Allow kid loans	Bank › Bank settings
Approval night light, Athan light, Update light	This Board › Board Light (Boards with the edge light)
Approval reminders	Account & Family
Asr Calculation (Shafi / Hanafi)	Prayer & Athan
Athan Everywhere (speakers), pre-prayer reminder	This Board › Athan on your speakers (on the Board, Family plan)
Athan history	Prayer & Athan
Athan popup theme, Which prayers	Prayer & Athan
Athan recording / Fajr athan recording	Prayer & Athan
Athan volume	This Board (this Board), or Prayer & Athan (other devices)
Board follows the time of day (Auto time block)	Tasks, Points & Bank
Board Theme (daytime / nighttime, Auto day & night)	Family Board
Calculation Method, Prayer Time Source	Prayer & Athan
Calendar subscriptions (ICS), feed colors	Calendar
Cash Out	Kids, Points or Bank
Change password, your profile and avatar	Account & Family
Daily Quote	Family Board
Deposit split	Bank › Bank settings
Display size (zoom)	This Board (on the Board)

Dua after athan	Prayer & Athan
Edge light color and brightness	This Board › Board Light
Family board mode	Family Board
Family Board link, Sign out	Account & Family
Feedback, Send diagnostics, Guided tour	Settings › Help & support
Game Night QR	Family Board
Generate today's tasks, Clean Up Old Tasks	Tasks, Points & Bank
Hide the settings gear / Hide all top-right board icons	Family Board
High Contrast Mode, task density, font size, spacing	Family Board
Hifdh today on the board	Family Board
Hijri date adjustment	Prayer & Athan
Invite Parent	Account & Family (Family plan)
Islamic Announcements	Family Board
Jumu'ah screensaver on Fridays	Family Board
Keep screen on	Family Board
Kid column features	Family Board
League board style	Leagues
Parent PIN	Account & Family
Per-Device View Profiles	Family Board
Plan & Billing	Account & Family (on the web)
Play athan at prayer times / sound on this device	Prayer & Athan
Points per dollar	Tasks, Points & Bank
Prayer Location, Time Zone	Prayer & Athan
Qur'an speakers (Play on…)	Duas & Learning or the Mushaf reader, on the Board
Quick Add Presets, Streak Bonuses	Tasks
Refresh the app	Settings

Require approval for kids' bank entries	Bank › Bank settings
Resets (a kid's points, family data)	Tasks, Points & Bank
Return to the board when idle	Family Board
Sadaqah Charities	Bank › Bank settings
Screensaver, start after idle, style, rotation	Family Board
Secure My Data, recovery code, Unlock another device	Account & Family
Share anonymous usage data	Account & Family
Simple mode, Read tasks aloud, Track prayers	Kids › edit a child
Surah Al-Kahf on Fridays (time, reciter, where it plays)	Prayer & Athan
Time Blocks (and "finish all to earn" 🔒)	Tasks, Points & Bank
Time Format, Temperature Unit	Family Board
Update the Board app	This Board (when an update is ready)
Where each prayer plays, athan volume per prayer	This Board
Widgets	Family Board

A Appendix: more safety notices

Keep the Board at least 20 cm (8 in) from people's bodies during normal use. Also:

- Do not push objects into holes and ventilation slots. Do not expose the product to moisture or place objects filled with liquid on or near it.
- Do not place a naked flame source, such as a lighted candle, on or near the product.
- Do not store or operate the device where the temperature is above 50 °C or below −10 °C (the specification sheet narrows this to 0 to 40 °C in use).
- Do not hit the device or place heavy or sharp objects on it. Use only accessories specified by the manufacturer. Keep it away from benzene, thinners and other chemicals.
- Do not attempt to repair the product yourself; use a qualified service agent.
- Dispose of electrical and electronic equipment separately from household waste, through your local collection system.



This guide, always up to date

adabstars.com/start

Scan the code with your phone's camera to open the latest version of this manual.

Help: support@adabstars.com · adabstars.com
ADABSTARS LLC · Allen, Texas, USA
Made in China · Edition November 2026